


Strong Light Control Systems

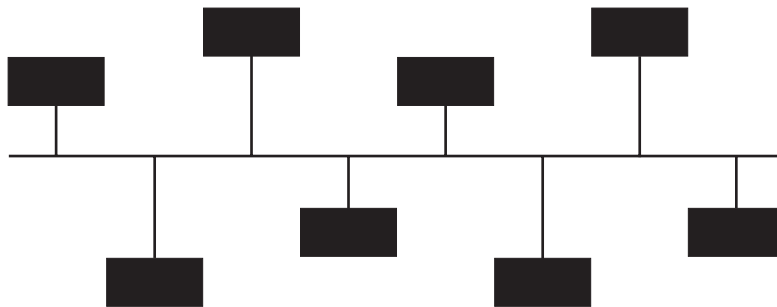

Installation, Setup, and Operation Manual (Covers LCS, CLD, AD, LDP, and AP Models)



Revision 1.02
Jan 2006

Strong Light Control Systems Installation, Setup and Operation Manual

PR011 Revision 1.02

This manual describes the installation, setup and operation of the LCS, AD, CLD, LDP, and AP Dimmer and auxiliary cabinets.

Optional CineNet and related equipment is covered in the following product reference manuals:

- PR001 CNA Installation Manual
- PR002 CNA-200 Setup and Operation Manual
- PR003 CNA-150 Setup and Operation Manual
- PR004 CNA-100 Setup and Operation Manual
- PR005 QDC-400 Setup and Operation Manual
- PR006 ACP-50 Installation and Setup Manual
- PR007 RVC-5 Installation and Setup Manual
- PR008 PCI-64 Gateway Interface Installation
- PR009 CineNet Host Software
- PR010 RCM-10/RSM-10/RSM-20 Installation and Operation Manual
- PR011 Strong Dimmer Installation, Setup, and Operation Manual
- PR012 eCNA-100 Automation Manual
- PR013 eCNA-150 Automation Manual
- PR014 eCNA-200 Automation Manual
- PR016 Strong FP350 Installation and Operation Manual
- PR017 Eprad FP350 Installation and Operation Manual
- PR018 Paging system Setup and Installation Manual
- PR019 VNC Setup and Operation Manual
- PR020 CineSuite Installation and Operation Manual

Warranty

CineNet automation products, sold by STRONG INTERNATIONAL, are warranted against defects in materials and workmanship for one year from the date of purchase. There are no other express or implied warranties and no warranty of merchantability or fitness for a particular purpose.

During the warranty period, STRONG INTERNATIONAL will repair or, at its option, replace components that prove to be defective, provided the unit is shipped prepaid to the manufacturer directly or via an authorized distributor. Not covered by this warranty are defects caused by modification, misuse or accidents and any further damage caused by inadequate packing for service return.

STRONG INTERNATIONAL's obligation is restricted to the repair or replacement of defective parts and under no circumstances will STRONG INTERNATIONAL be liable for any other damage, either direct or consequential.

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of STRONG INTERNATIONAL.

Table of Contents:

Introduction	5
System components	6
QDC-400 Dimmer Controller	6
The QDC and luminescence	7
QDC Operation	9
37627 Analog Dimmer Controller	10
37627 Operation	10
The 37870 2K Watt Dimmer Module	10
The 37670 2K Watt Dimmer Module	10
Installation	12
Installation Guidelines	12
Dimmer Cabinet Mounting	14
Typical Wiring and Configuration	16
Typical House and Stage Lights Wiring	19
Parallel 2K Watt Power Modules	20
Transformer Wiring (LCS Dimmer Only)	22
Multiple QDC-400 Control Boards	23
Setup	24
The QDC-400	24
Switch Configuration	24
Switch Definitions	25
Bypass Jumpers and Channel Override Switches	25
Status LED	27
The 37627	28
37627 Analog Control Card, Basic Setup	28
Configuration	28
Adjustment Potentiometers	29
LCS Dimmer Setup	32
Manual Control	34
Using the LCS-2K/4K Dimmer with the CNA	34
eCNA-150 Dimmer Set-up	34
CNA-150 Dimmer Setup	35
CNA-100/150 soft overrides and program	36
eCNA-200 Dimmer Set-up	36
CNA-200 Dimmer Set-up	37
CNA-200 soft overrides and program	38
Host Dimmer Setup	39
Addendum	41
Troubleshooting	41
Software Changes	43
BootLoader Changes	44
Index	45
STRONG Dimmer Major replacement parts	48

Introduction

The dimmers featured in this manual provide many options and configurations to meet the various specialized needs of the end user. It contains several products made up of familiar lighting control circuits as well as some new additions to make the task of lighting control much easier.

Below is a listing of the currently available models and their functions. The model number of your particular unit can be found on its front cover in the lower right-hand corner. This will help you in identifying which unit you have and its installed features.

- LCS-4K** (37890-1) Wall mounted 4000 watt 4 channel dimmer featuring front panel user interface, QDC control card, and 2 DPM-2K Power modules. This unit is compatible with all currently available CNA automations. It includes a user interface on its front panel with a keypad, an LED bar graph indicator for channel level display, and a backlit LCD alphanumeric display.
- LCS-2K** (37890-0) Wall mounted 2000 watt dimmer with all of the above features but only contains one DPM-2K dimmer module.
- LDP-4K** (37894-1) Wall mounted 4000 watt auxiliary dimmer module housing, features compatibility with the QDC-400 dimmer controller. Contains 2 DPM-2K dimmer modules. Can be run from any CNA automation configured with a QDC-400 card.
- LDP-2K** (37894-0) Smaller wall mounted 2000 watt auxiliary dimmer, features compatibility with the QDC-400 dimmer controller. Contains only one DPM-2K dimmer module. Can be run from any CNA configured with a QDC-400 card.
- CLD-4K** (37892-1) Wall mounted 4000 watt dimmer control with no front panel controls, features 2 DPM-2K modules and a QDC card. Compatible with all CNA systems.
- CLD-2K** (37892-0) Wall mounted 2000 watt dimmer control as above unit only with a single DPM-2K dimmer module. Compatible with all CNA automations.
- AD-4K** (37891-1) Wall mounted 4000 watt 2 channel dimmer featuring front panel access to dimmer controls and overrides. Based on the 37627 analog dimmer card. Unit features a pair of 37670 dimmer modules, a 37627 dimmer control card, and front panel access for adjusting dimmer parameters. Compatible with all CNA automation systems.
- AD-2K** (37891-0) Wall mounted 2000 watt dimmer with same features as above unit but only has one dimmer module
- AP-4K** (37894-1) Wall mounted 4000 watt auxiliary dimmer module housing, contains a pair of 37627-compatible dimmer modules. For use with 37627 cards only.
- AP-2K** (37894-0) Smaller wall mounted 2000 watt dimmer, contains only a single 37627-compatible dimmer module. For use with 37627 cards only.

All above units feature front mounted circuit breakers, internal terminal blocks for clean and safe wiring connections, and a rugged steel housing to protect the sophisticated circuitry within.

Additionally any 2000 watt dimmer from this series can be converted to a 4000 watt dimmer should a need arise for more lighting in the future. All units can be factory-configured for 220 Volt operation at the customer's request.

This manual has been created to assist with the installation of your dimmer and provide some insight on your unit's operation. It contains general information for those who are not familiar with Strong's lighting control systems as well as specific information related to recently developed system components. Should you feel that any subject is not adequately covered within this manual or the manual to which it refers, please feel free to contact Strong international. It is our desire to make installation and operation of our products as pleasant and trouble-free as possible.

System components

The CNA Light Control System is used to create custom lighting effects in the theatre auditorium. This system is based on a control board and a dimmer power module.

The QDC-400 is a 4 channel dimmer controller that can drive up to two 37870 (DPM-2KW) power modules per channel. The CNA automation can drive up to four QDC-400 control boards for a total of 16 channels. The CNA automations currently support two lighting zones that can be configured for one or more of 16 channels.

The 37627 analog control board has 2 channels capable of driving two 37670 (2KW) power modules each. This unit receives control commands from the relay outputs on either a 39331 or a 39332 termination board. This system, though an older design, can still provide a cost-effective and reliable means to control Strong's dimmer power modules.

The 37670 and 37870 dimmer power modules are capable of handling 2000 watts of incandescent lighting each. They feature a line phase dependent firing circuit for voltage regulation and a 40 Amp triac mounted to a massive extruded aluminum heat sink. They are designed to run for extended amounts of time at maximum load without generating excessive heat or failing. The 37670 dimmer power module functions only with the 37627 controller and the 37870 functions only with a QDC-400 controller. They cannot be interchanged.

QDC-400 Dimmer Controller

The QDC-400 is a computerized four channel light dimmer controller. The QDC-400 connects to the LIN (Local I/O Network) and receives its set up parameters and commands from the CNA automation system or if using a LCS system, optionally the front panel user controls. Light levels for each channel can be stored and recalled by the CNA automation program. Each level can be set from 0% to 100% in 1% increments. Each level also has a "Fade-In" time associated with it. The Fade-In time controls how long it takes the lights to ramp to a new level. The Fade-In time can be set from 0 to 99 seconds with 1 second resolution.


This controller was designed specifically to work with the 37870 dimmer module and is *not* compatible with the 37670 dimmer module.

The QDC and luminescence

The QDC-400 follows a level to output ratio called the “Square Law” dimming curve. It is an exponential relationship between percentage of light perceived and the percentage of light measured. The Square Law curve is a presumed relationship between perceived illuminance and measured illuminance. The theoretical Square Law dimming curve is shown below.

A table with the one hundred set points is generated from these equations. Each set point and its corresponding output RMS value are shown below for a 120 volt input. This table may aid the technician in setting up light levels and can be used to calculate power consumption if necessary.

The values in the table are theoretical values. The RMS output voltage is based on a nominal 120 vac input. Actual measurements may vary 1 or 2 volts on a true RMS meter.

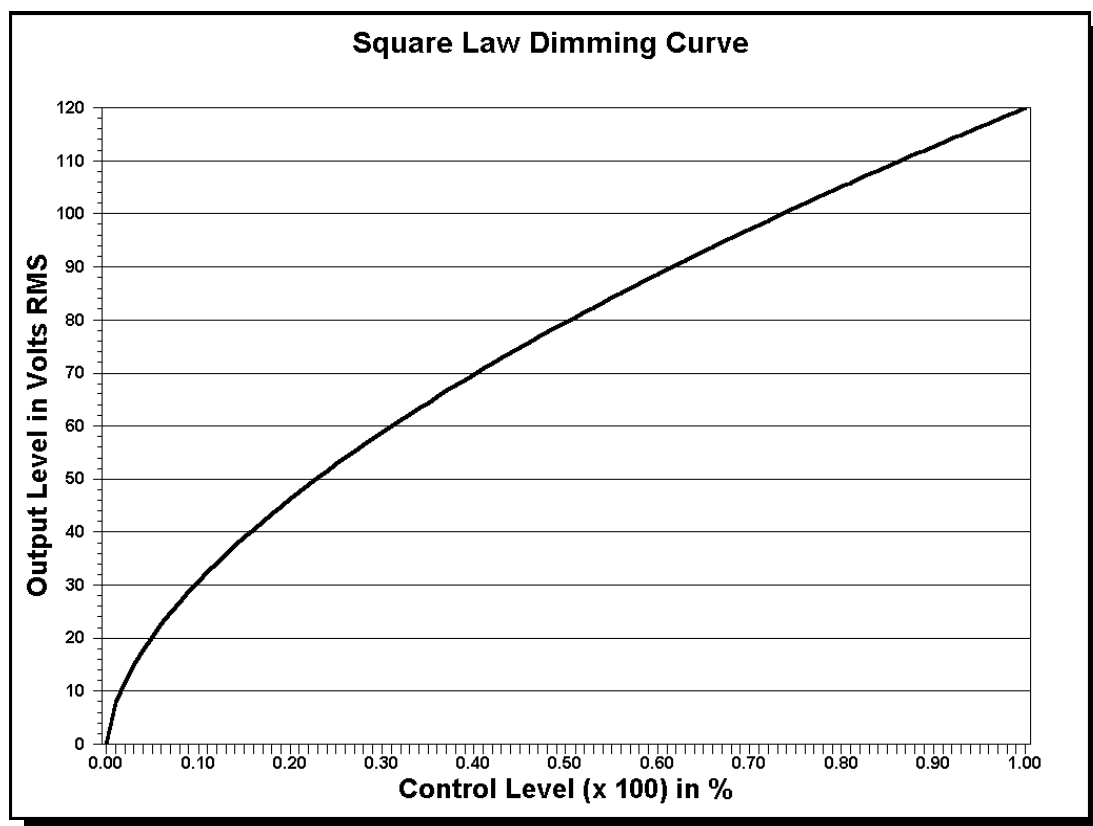

Light Level output is continuous and flicker-free over the entire dimming range

The QDC-400 applies a similar table of one hundred points and linearly interpolates all points in between to a 16-bit resolution providing extremely smooth ramping from level to level

Set Point	Output
0%	0.0 V _(RMS)
1%	7.86 V _(RMS)
2%	11.84 V _(RMS)
3%	15.05 V _(RMS)
4%	17.85 V _(RMS)
5%	20.37 V _(RMS)
6%	22.69 V _(RMS)
7%	24.86 V _(RMS)
8%	26.90 V _(RMS)
9%	28.85 V _(RMS)
10%	30.70 V _(RMS)
11%	32.49 V _(RMS)
12%	34.20 V _(RMS)
13%	35.86 V _(RMS)
14%	37.47 V _(RMS)
15%	39.03 V _(RMS)
16%	40.55 V _(RMS)
17%	42.03 V _(RMS)
18%	43.48 V _(RMS)
19%	44.90 V _(RMS)
20%	46.28 V _(RMS)
21%	47.64 V _(RMS)
22%	48.97 V _(RMS)
23%	50.27 V _(RMS)
24%	51.55 V _(RMS)
25%	52.82 V _(RMS)
26%	54.06 V _(RMS)
27%	55.28 V _(RMS)
28%	56.48 V _(RMS)
29%	57.67 V _(RMS)
30%	58.84 V _(RMS)
31%	59.99 V _(RMS)
32%	61.13 V _(RMS)
33%	62.25 V _(RMS)
34%	63.36 V _(RMS)

Set Point	Output
35%	64.46 V _(RMS)
36%	65.54 V _(RMS)
37%	66.61 V _(RMS)
38%	67.67 V _(RMS)
39%	68.72 V _(RMS)
40%	69.76 V _(RMS)
41%	70.79 V _(RMS)
42%	71.80 V _(RMS)
43%	72.81 V _(RMS)
44%	73.81 V _(RMS)
45%	74.80 V _(RMS)
46%	75.78 V _(RMS)
47%	76.75 V _(RMS)
48%	77.71 V _(RMS)
49%	78.66 V _(RMS)
50%	79.61 V _(RMS)
51%	80.55 V _(RMS)
52%	81.48 V _(RMS)
53%	82.40 V _(RMS)
54%	83.32 V _(RMS)
55%	84.23 V _(RMS)
56%	85.14 V _(RMS)
57%	86.03 V _(RMS)
58%	86.92 V _(RMS)
59%	87.81 V _(RMS)
60%	88.68 V _(RMS)
61%	89.56 V _(RMS)
62%	90.42 V _(RMS)
63%	91.28 V _(RMS)
64%	92.14 V _(RMS)
65%	92.99 V _(RMS)
66%	93.83 V _(RMS)
67%	94.67 V _(RMS)
68%	95.51 V _(RMS)
69%	96.33 V _(RMS)

Set Point	Output
70%	97.16 V _(RMS)
71%	97.98 V _(RMS)
72%	98.79 V _(RMS)
73%	99.60 V _(RMS)
74%	100.41 V _(RMS)
75%	101.21 V _(RMS)
76%	102.01 V _(RMS)
77%	102.80 V _(RMS)
78%	103.59 V _(RMS)
79%	104.37 V _(RMS)
80%	105.15 V _(RMS)
81%	105.93 V _(RMS)
82%	106.70 V _(RMS)
83%	107.47 V _(RMS)
84%	108.23 V _(RMS)
85%	108.99 V _(RMS)
86%	109.75 V _(RMS)
87%	110.50 V _(RMS)
88%	111.25 V _(RMS)
89%	112.00 V _(RMS)
90%	112.74 V _(RMS)
91%	113.48 V _(RMS)
92%	114.22 V _(RMS)
93%	114.95 V _(RMS)
94%	115.68 V _(RMS)
95%	116.41 V _(RMS)
96%	117.13 V _(RMS)
97%	117.86 V _(RMS)
98%	118.57 V _(RMS)
99%	119.29 V _(RMS)
100%	120.00 V _(RMS)

See the QDC Dimmer control manual for further details on the configuration and setup of this board.


QDC Operation

The QDC-400 receives power from the CNA automation and the DPM-2KW Dimmer Module. (and the in-cabinet transformer in the LCS series Dimmer only)

The QDC-400 receives the light level commands from the CNA or the front panel dimmer controls. If the dimmer modules are powered up and the CNA is not, the lights will stay off until the CNA is powered up.

The dimmer manual override switches on the CNA front panel are connected directly to the QDC-400 and will control the lights up and down (even if the CNA is not powered up).

If the CNA loses power, the lights will hold their current state. When power is re-established to the CNA, the lights will go to the power up defaults (house up, stage up).

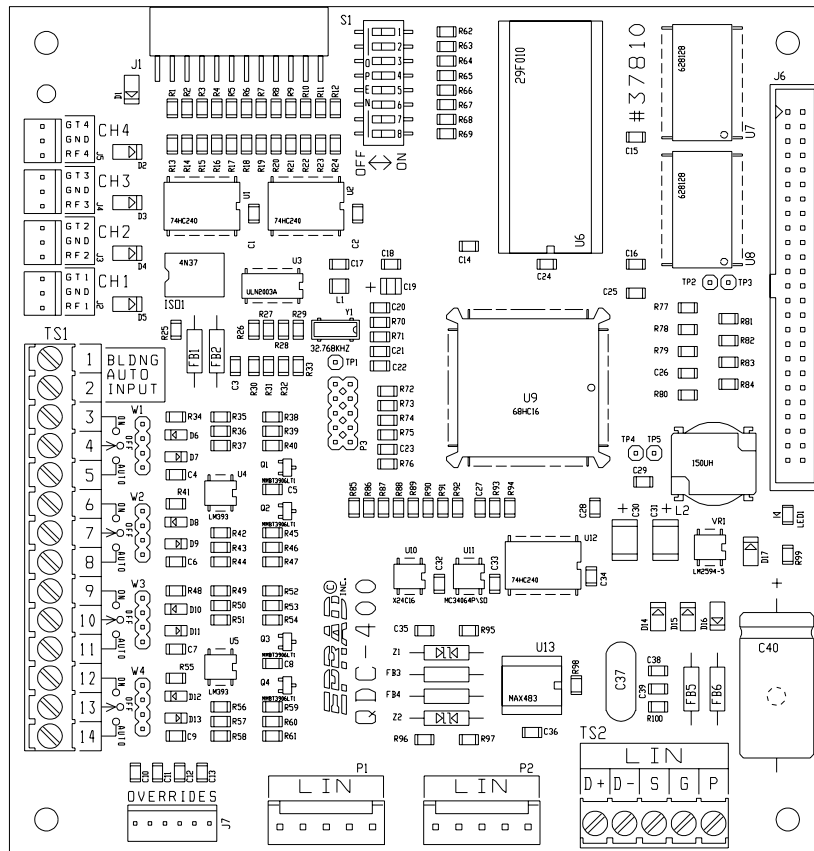

37627 Analog Dimmer Controller

The 37627 analog dimmer card is used in the stand alone analog dimmer. It has been superceded by the QDC-400 but is still a viable, cost effective alternative to full digital automation. The 37627 has adjustable controls on its PC board to handle the task of setting the fade time for lighting transitions as well as adjustments for maximum up, mids, and minimum down brightness for each of its two channels. Front panel controls on the AD series of dimmer cabinets allow convenient adjustments for the up and down levels and feature switches to select channel up or down. The analog dimmer card is wired to the termination board in a CNA system or can be controlled manually via switches on the front panel of the dimmer unit. The 37627 circuit can be integrated into virtually any automation or control system. This card will work with the 37670 power modules only.

See your CNA installation manual for termination board wiring details.

37627 Operation

The 37627 receives trigger “signals” from the Booth or Dual termination board, this is actually a switch closure and could come from any source. A timing circuit provides the transition rate for the up and down states of each channel. The pulse train output causes the dimmer power module’s triac to “fire” (conduct) at specific places on the 60 cycle AC waveform thus varying the pulsed voltage delivered to the light circuit.

CNA overrides are connected in parallel with the 37627 board and will control the lights independent of the CNA’s state of operation.

In the event of a power outage, upon return of service the dimmer control card will revert to its “Wake Up State” settings for house and stage as preset by the dip switch configuration.

See 37627 setup section of this manual for further information regarding this board’s application.

The 37870 2K Watt Dimmer Module

The DPM-2KW dimmer module contains an optically isolated low power triac, a high power triac and a small isolation transformer. The transformer is connected to the same power line as the lighting load, to obtain a line reference. The triac firing pulse from the QDC-400 is connected to an optically isolated triac. This triac is used to apply gate current to the high power triac. The RFI filter reduces the electrical noise generated by the phase angle firing of the power triac. The reference signal is full wave rectified AC from the transformer. It provides the zero crossing timing reference and power to the QDC-400 board.

The 37670 2K Watt Dimmer Module

The 37670 dimmer module is similar to the 37870 (DPM-2K), it contains an optically isolated triac, a high power triac and a small isolation transformer. The transformer is connected to the same power line as the lighting load, to obtain a line reference. The triac firing pulse from the analog dimmer is connected to the optically isolated triac. This triac is used to apply gate current to the high power triac. The RFI filter reduces the electrical noise generated by the phase angle firing of the power triac. The reference signal is full wave rectified AC from the transformer. It provides the zero crossing timing reference. The 37670 is only compatible with the analog dimmer board.

37870 Dimmer Power Module Functional Block Diagram


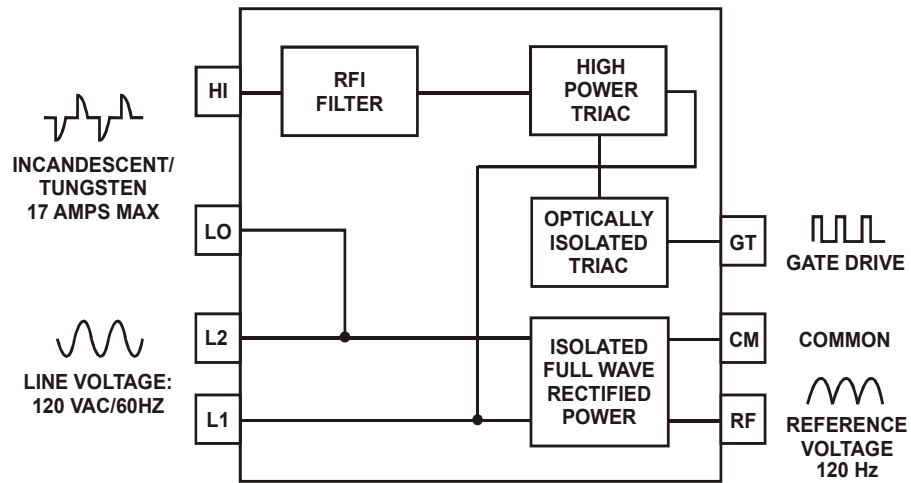


Figure 2

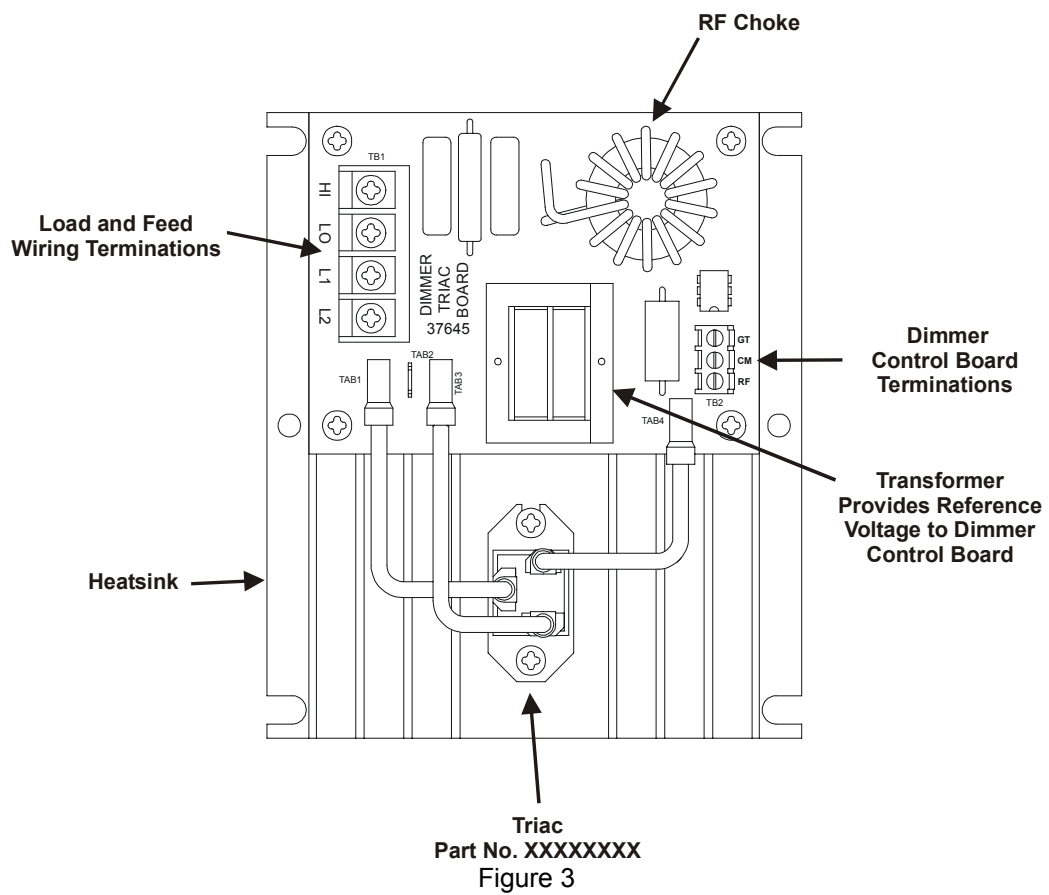

Installation

Installation Guidelines

Strong automation and dimmer systems are microprocessor based theatre products. Field installations over the past several years have indicated that common wiring practices vary by region and by installation. For this reason, a set of guidelines which will assist with the successful installation of Strong's computer equipment is listed below.

Caution, please be sure that all power is removed from this unit and all others both connected, and to be connected prior to opening cabinet, installing, or servicing.

Microcomputers by their very nature, are susceptible to noise and power supply fluctuations. While these products were designed to function in a noisy environment and survive poor installations, it is to the benefit to the end user that these guidelines be followed.

The items listed below are the result of 25 years of industrial experience and are common, accepted practice for the installation of industrial microcomputers. The cost of implementing is minimal while their benefit is immeasurable.

1. Inspect the product for shipping damage immediately upon receipt. In the event of damage, file a claim with the carrier immediately. Do NOT attempt the installation of a damaged unit.
2. Verify that all the connectors are seated in their sockets and that all cables are firmly attached.
3. Verify the proper jumper and DIP switch configurations where applicable.
4. Insure that all requirements of national and local electrical codes are satisfied during installation. Run *clean* power (dedicated to the computer systems only) to all automations from the service entrance panel or the closest branch panel. The line, neutral and ground wires should all run back to the main service panel (separate from all other loads). It is acceptable and preferred if all automations were run from a single distribution point.

IMPORTANT NOTE: Do not connect the projector motors, changeovers, xenon rectifiers, dimmer power or other heavy or noisy loads to this circuit.

5. It is imperative that the automation and associated equipment have a good ground. This is important in terms of safety and performance. The automation has an interference filter for the AC inputs. The specific intent of the filter is to reduce the effect of interference (noise) on the AC line that provides power to the unit, by providing a "leakage" path to ground from the power lines.
Important note: Unless an earth ground is provided this leakage can pose an electrical shock hazard.

In new installations use a copper conductor (not the conduit) from the automation back to the service entrance ground. Connect all automations in the booth to this ground point. This arrangement is best and most reliable. If this is not practical, (such as a retrofit for example), provide the best “earth” ground possible.

A second best setup would be to run copper wire back to the ground lug in a branch panel.

The minimum acceptable grounding method is conduit ground back to the branch box. In some installations satisfactory operation with this ground may not be possible.

6. Do not run the line voltage power wires in the same raceways as the low voltage signal wires. This is important from both a safety standpoint and a system reliability standpoint. It is best to keep the failsafe, cue detector, LIN, LSN, sound format and dimmer control wires separate from projector motor, changeover, xenon lamp, and other power carrying wires. If it is essential that they be run in the same duct, keep them separated in the duct.

Dimmer Cabinet Mounting

The dimmers described in this manual should be mounted on a flat wall of appropriate construction as to support the weight of the dimmer unit (Approximately 23 lbs / 10.4Kg for the large units, 15 lbs / 5.4Kg for expansions) and provide access to any controls or circuit breakers located on its front panel.

The dimmer should be mounted in a way that will provide adequate space for ventilation, do not block the convection vents located at the sides, bottom, and front of the cabinet. 4 inches minimum clearance is recommended for the sides and 6 inches for the bottom.

Remember: To install or remove the cabinet's front cover panel, retaining screws must be accessed at the sides of the unit. If adequate side clearance is not maintained servicing could become difficult and time consuming.

There are 4 holes, each .28" in diameter located inside the cabinet at the back for mounting hardware. Appropriate knock-outs are provided for conduit entry into the unit during installation. The diagrams shown below illustrate unit dimensions and space required for installation.

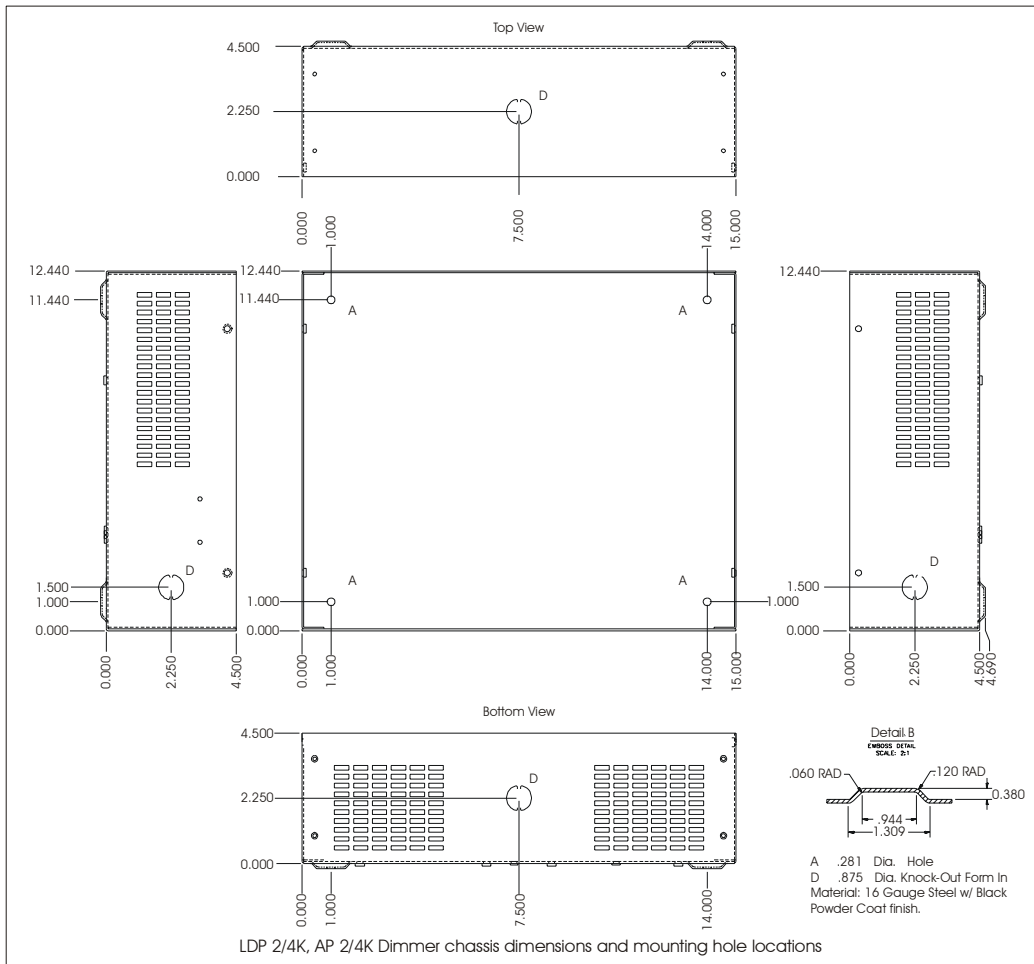


Figure 4

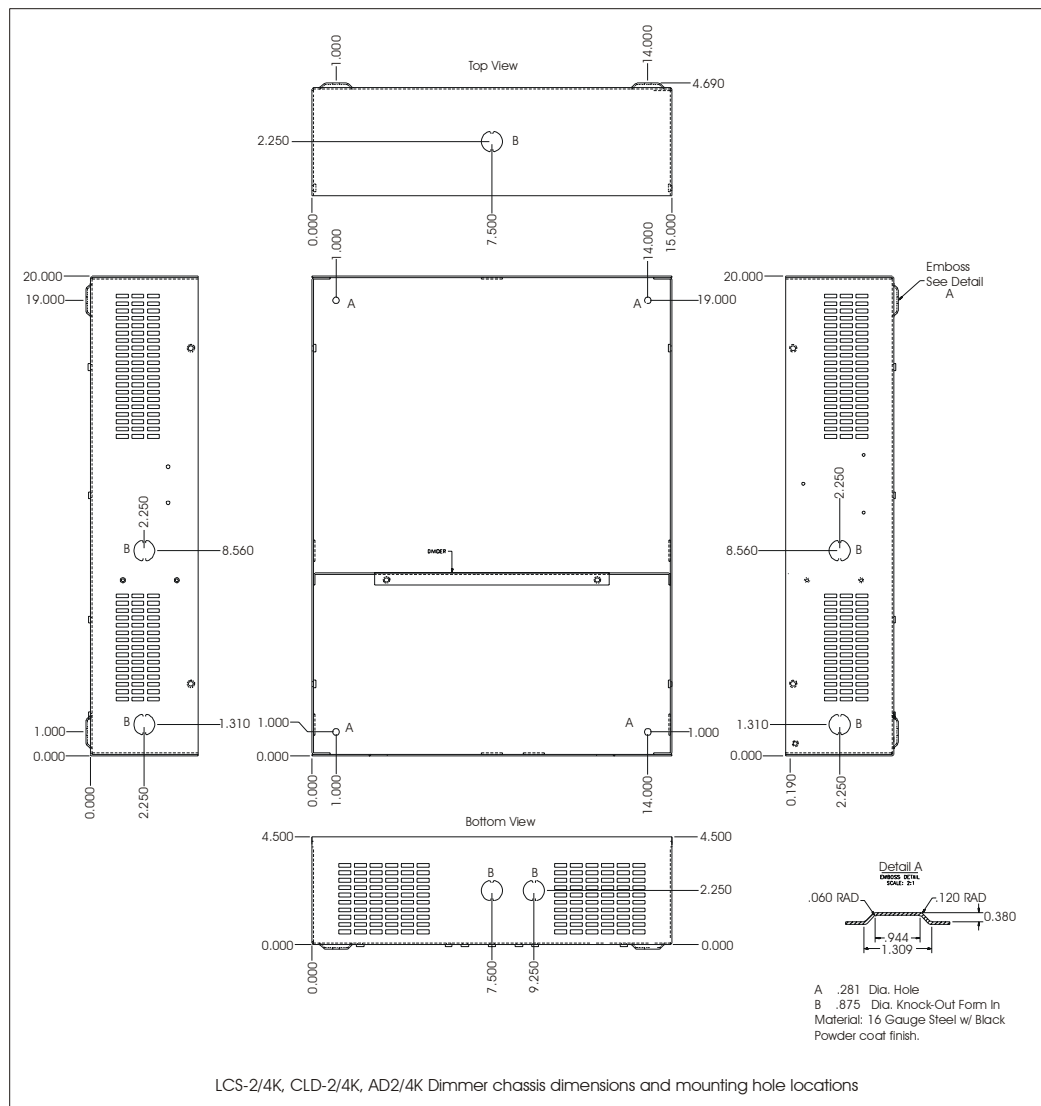


Figure 5

The overall dimensions of the cabinet including front cover and protrusions are listed as follows:


Model	W	D	H
LCS, CLD, AD	15.25" (38.73cm)	5" (12.7cm)	20.25" (51.435cm)
AP, LDP	15.25" (38.73cm)	5" (12.7cm)	12.6" (32cm)

Typical Wiring and Configuration

NOTE 1

Feed and Load wire must be sized according to light load power. Consult Local Electrical Code for gage requirements.


LIGHTS

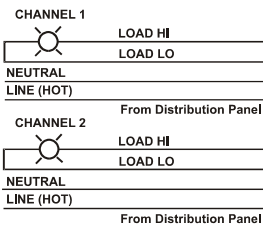

NOTE 2


Alternatively the LOAD LO wire may be connected to the lights directly from the main distribution panel. It is not required to enter the LCS-2K/4K Dimmer panel. The NEUTRAL is required for dimmer operation.

 AUTOMATION



NOTE 3

STRONG's Cinema Network Automation (CNA) only requires a low voltage data cable for communications. Use shielded RS-485 cable.

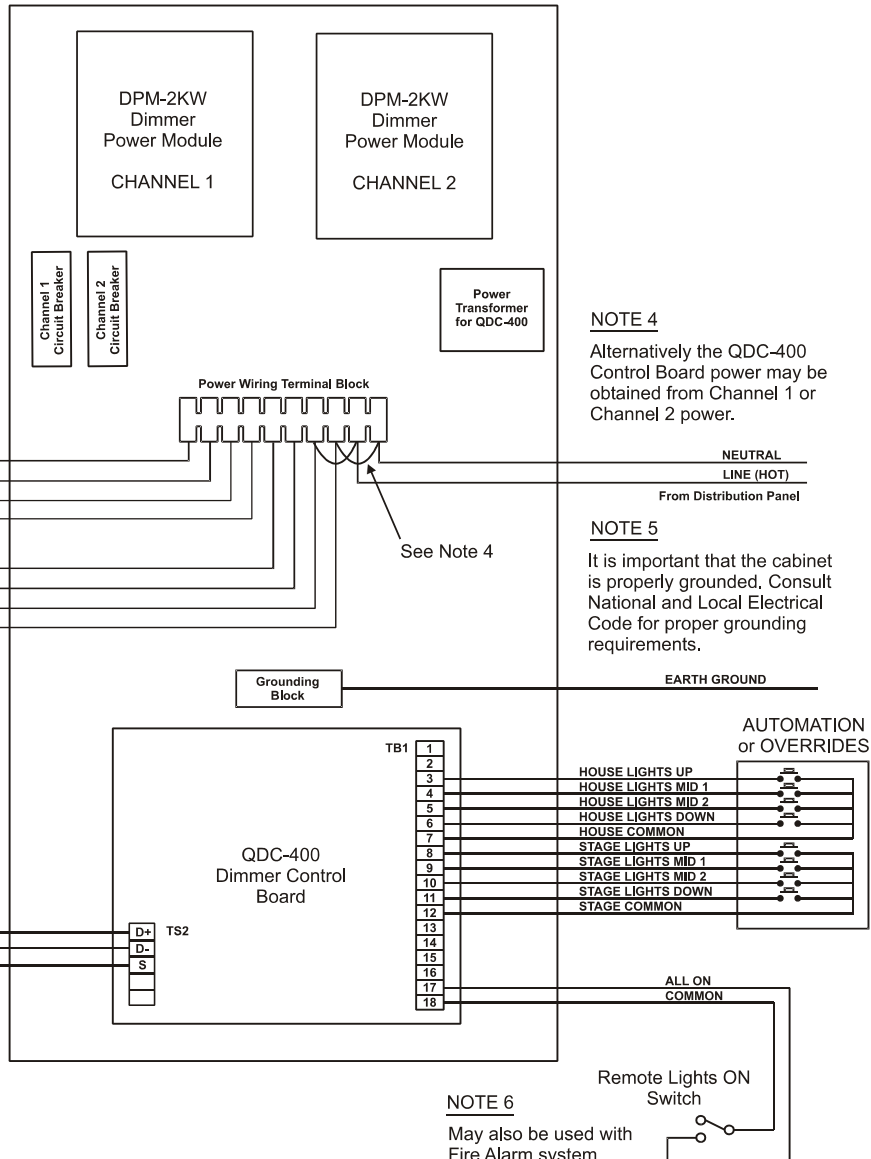

NOTE 4

Alternatively the QDC-400 Control Board power may be obtained from Channel 1 or Channel 2 power.


NOTE 5

It is important that the cabinet is properly grounded. Consult National and Local Electrical Code for proper grounding requirements.


NOTE 6

May also be used with Fire Alarm system.

Figure 6

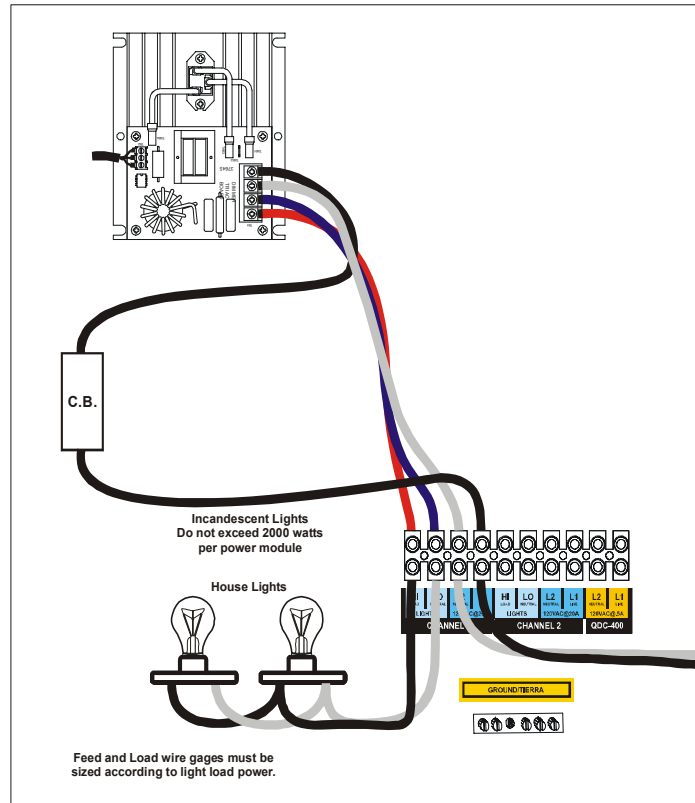

Example 1

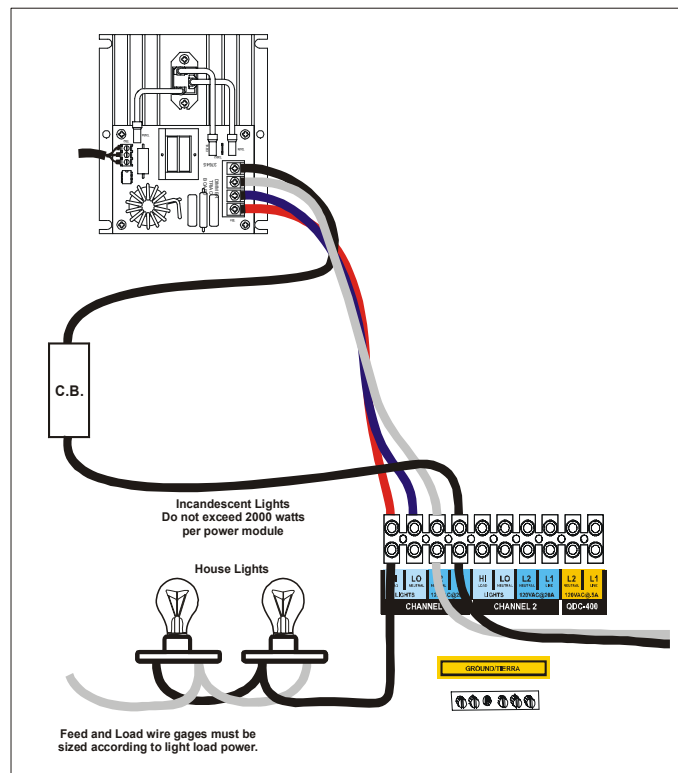

Example 2

There are two acceptable methods of wiring the 2KW power modules found in the dimmer cabinet to the lighting load. The first method involves wiring the return or neutral for the load and feed to the dimmer power module.

The second method involves wiring the load return (neutral) to power distribution panel. A neutral connection is still required at the power module. Since this wire will not carry much current, 18 AWG wire is can be used.

The above diagrams are a general connection guide for installation, actual terminations will be made at the terminal block within the cabinet. The load and line wiring is basically the same however. Much of the wiring is terminated internally and pre-wired during factory assembly.

The dimmer modules are mounted in a wall mount cabinet, hence you must determine the appropriate location for the unit. We recommend mounting it as close to the incoming power for the lights as possible. Power and signal/control lines may provide excellent conduction paths for rfi or electrical noise and long unshielded wire may serve as an efficient antenna. By minimizing the distance you are running the larger feed cables you are reducing the chance of erratic behavior. You may also want to consider keeping them at least six inches away from any audio cables and equipment since thyristor power or control lines may permit electrical noise to be induced into these cables. Entering the cabinet, you should have an appropriately sized supply or feed line. The supply line should be connected to the dimmer terminals identified as L1 (Hot, or Line) and L2 (Neutral) on the appropriate circuit. This will depend on your particular cabinet's configuration. The cabinet should be properly grounded in accordance with local electrical code requirements. The load line for the lights is connected to terminal positions identified as HI and LO once again corresponding to the appropriate circuit depending on unit configuration options.

All wiring connections should be secured in their locations and tested by gently pulling them to ensure that they are firmly clamped in place. Inspect to be sure that the bare wire is contacting the terminal block contacts, and that the insulation is not interfering with conduction.

Always double check your wiring for accuracy before applying power, damage as the result of improper connection will not be covered by your warranty. Additionally, the voltages and current involved in this unit can be harmful or deadly if applied improperly.

Typical House and Stage Lights Wiring

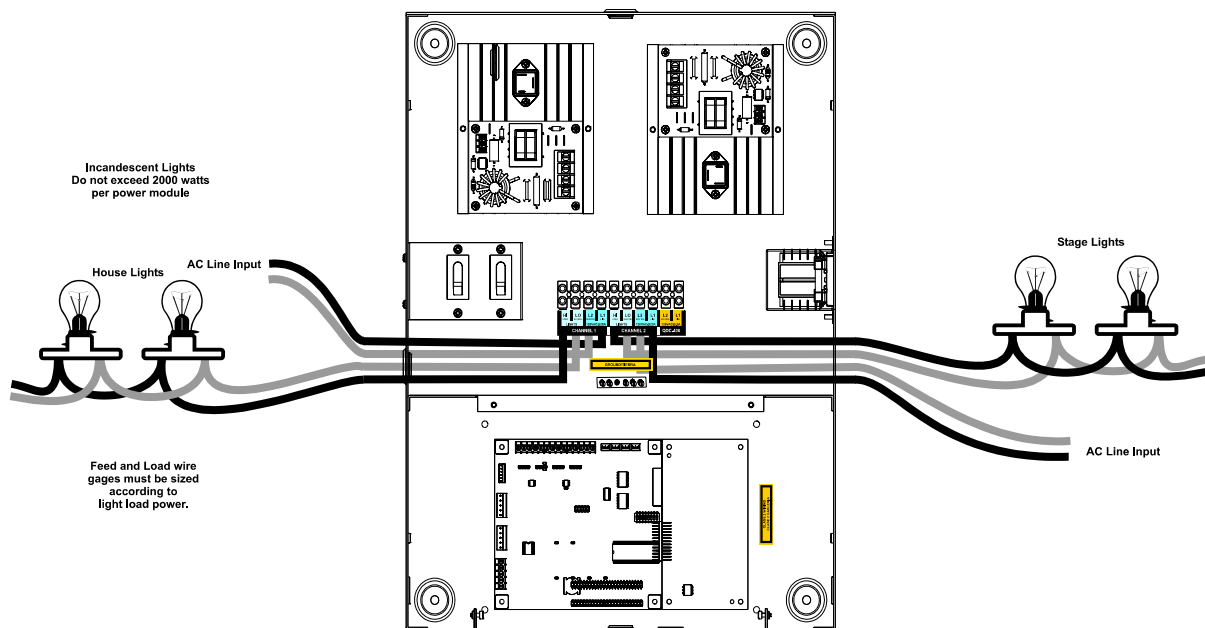


Figure 7

The drawing above depicts a typical 2 channel house and stage lights configuration. The house lights are controlled from channel 1 of the QDC-400 dimmer control board or the 37627 analog board and the stage lights are controlled from channel 2. Remember not to exceed the power module rating.

Each dimmer module contains a transformer connected to the same power line as the lights, which is used as a line reference for the analog controller and the QDC-400 as well. Since the house and stage lights are on different dimmer channels, they can be powered from different power line phases. This allows the installer to utilize a polyphase configuration, balancing the lighting load across distribution lines.

Parallel 2K Watt Power Modules

When more than 2000 watts of power are required for the lights circuit the 2KW dimmer modules can be paralleled. (This will only be necessary if all four QDC-400 channels are full or both on the 37627.) This is accomplished by wiring the COMMON and GATE terminals between the two modules. Do not connect a wire between the REFERENCE terminals.

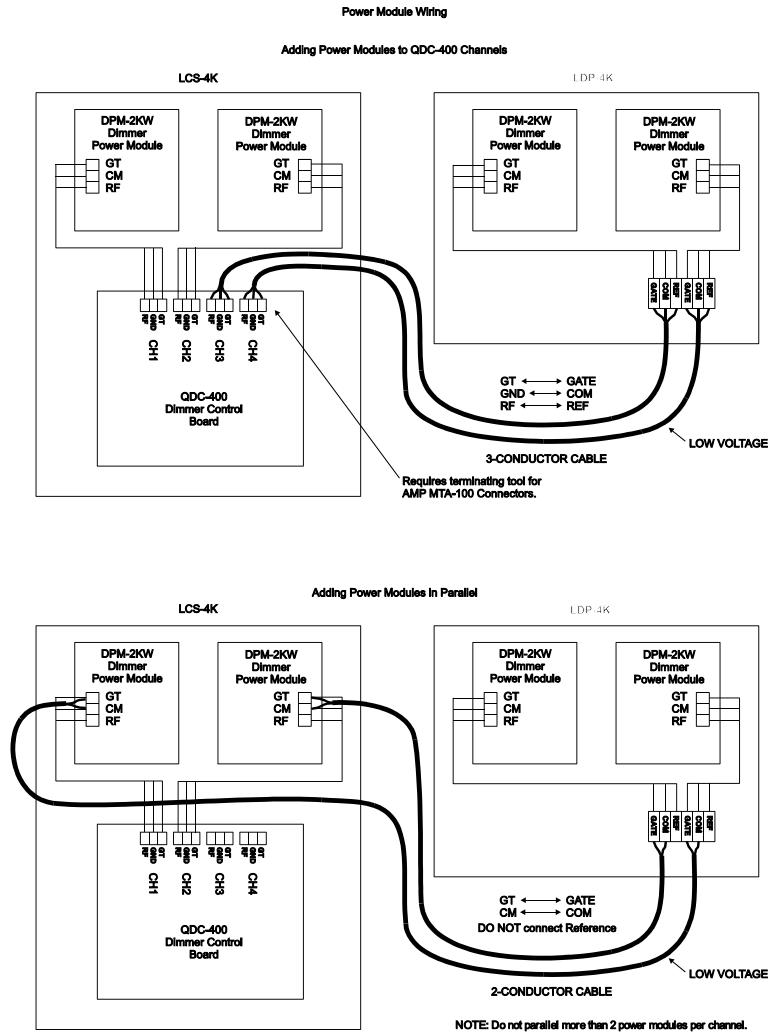


Figure 8

The above diagram shows a possible configuration using the LCS and a LDP unit in series. Below is a more direct representation of the circuit involved, actual connections will be made at the terminal blocks for the AC input and Load outputs.

Important: When modules are operating in parallel, the AC feed for both modules must be on the same power line phase.

This method of configuration allows many possibilities. Paralleling modules can be used when it is desirable to run 4000 watts in one cabinet using a single channel (ex: House lights), or if there is the need, one could wire the gate and common signals to an external dimmer such as the LDP or the AP series of expansion cabinets. This wiring method allows up to two power modules to be paralleled.

Parallel Dimmer Power Modules
Must be on same phase and not exceed 2 dimmers/ chan.

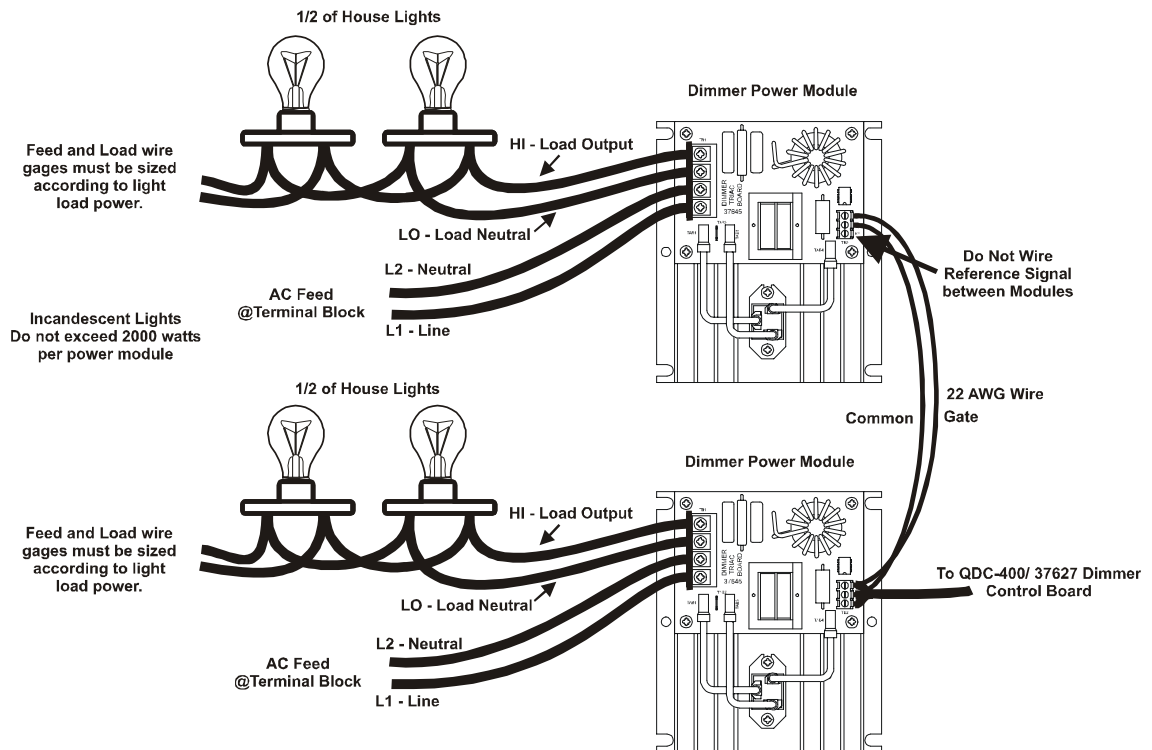


Figure 9

Transformer Wiring (LCS Dimmer Only)

The LCS series of dimmers require an additional internal connection to 120/ 220 volts for the powering of the user interface (display) board. This can simply be wired to the line voltage inputs of either channel via short jumper wires of at least 18 AWG. There is a 1 Amp fuse located on the right wall of the cabinet that is inline with this circuit. Should the display fail to operate, this fuse and the associated power feed should be checked first.


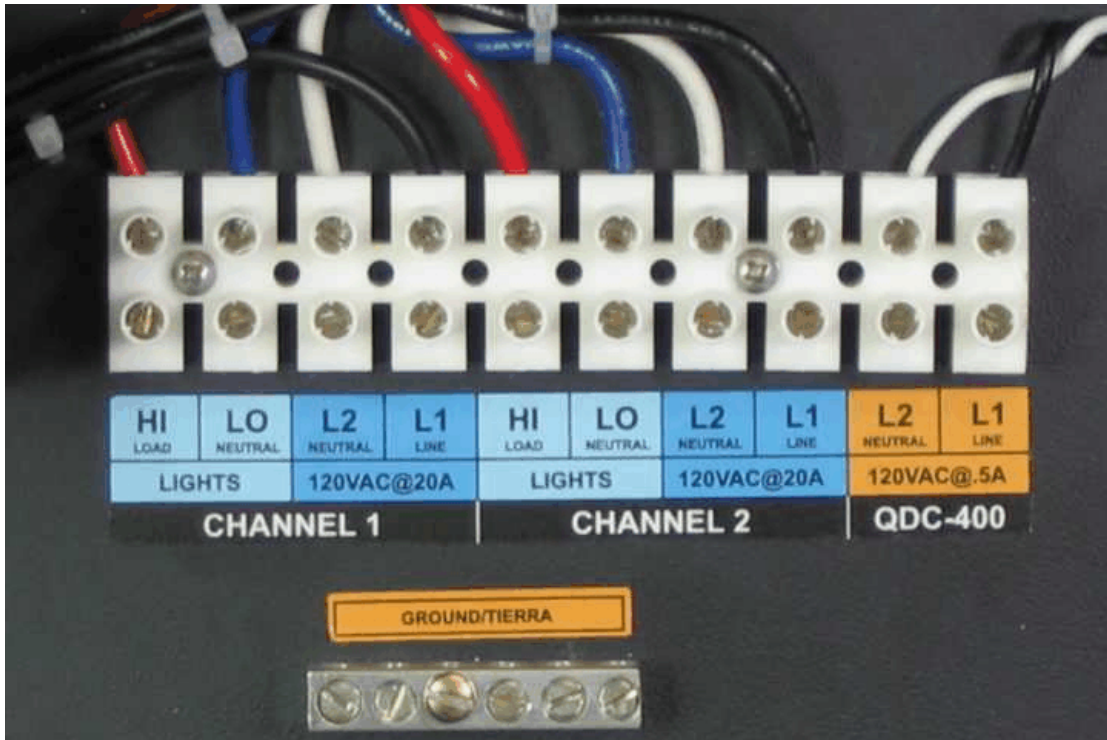


Figure 10

The above photo shows the termination points used in supplying power to the user display interface board. The transformer connection (marked QDC-400) may be wired in parallel with either channel's LINE and NEUTRAL power input or fed separately if desired. Units such as the CLD and the AD do not need additional power and will not have these 2 positions on the terminal block. Note that on the 2K model dimmers, the channel 2 terminal block positions will not be connected.

Multiple QDC-400 Control Boards

The CNA automations can support up to four QDC-400 control boards. Each QDC-400 can drive four channels of up to 4000 watts. The drawing shows the dimmer system at maximum capacity. Any of the 16 channels can be configured for any of 16 pre-defined zones. This information is provided to give an example of the CNA and QDC-400 based dimmer system's maximum power controlling ability. Few real world situations would require a dimmer that can run 64KW of light.

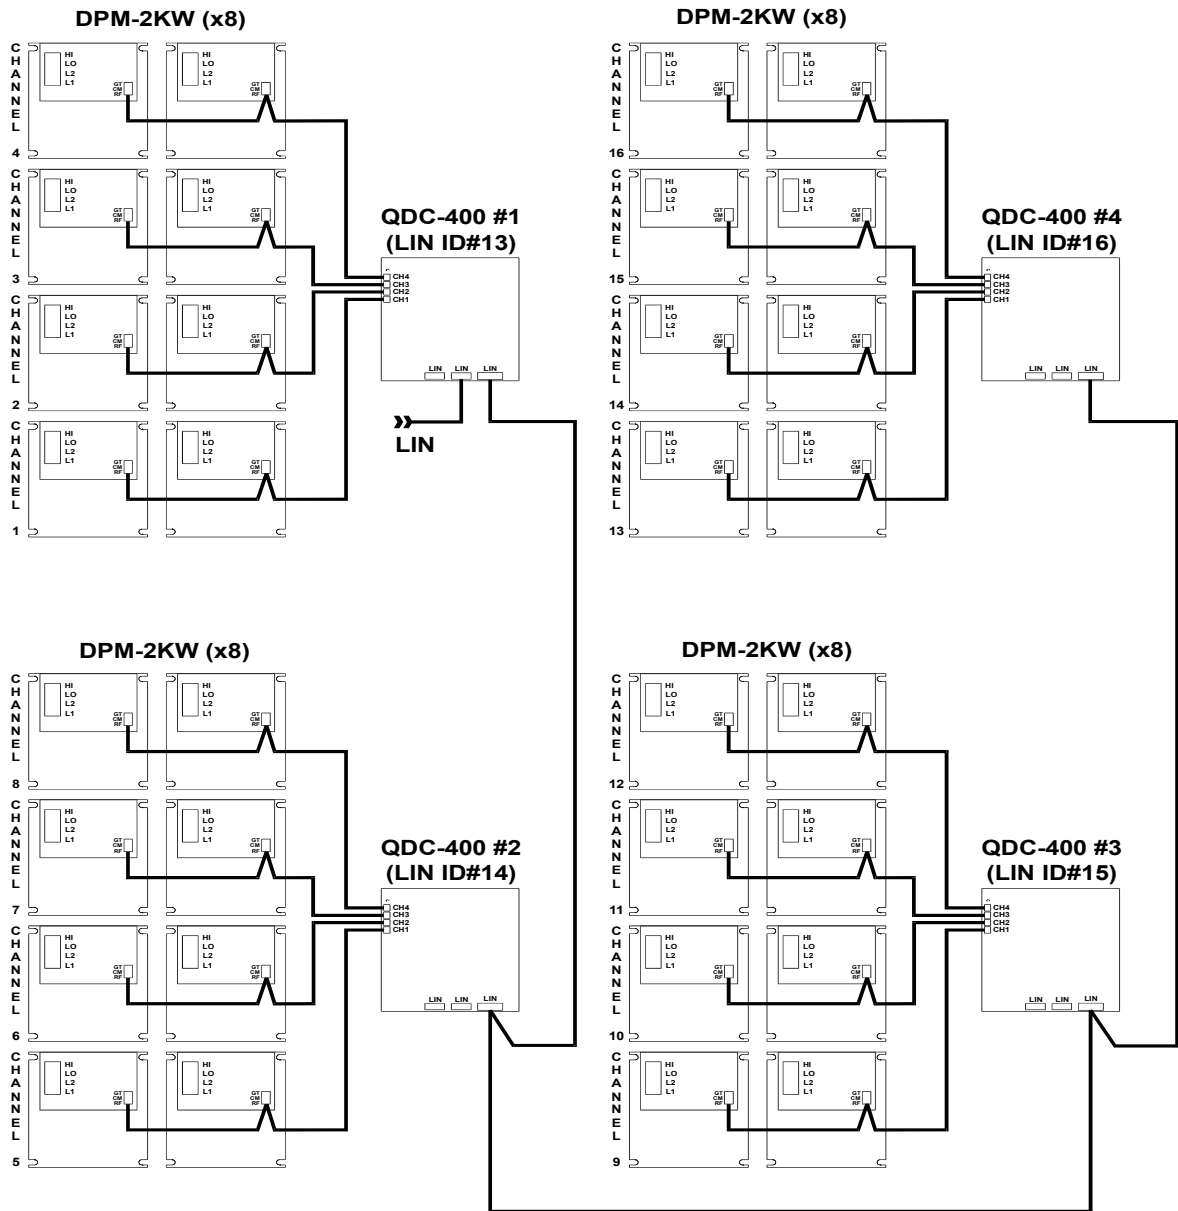

16 channels at 4000 watts per channel

Figure 11

Setup

This section describes the setup and configuration of your dimmer. At this point you should have all of your load and line wiring completed. Procedures in this part of the manual will be used to setup, test, and verify that your unit operates. Both digital and analog dimmer controllers require the installer to do an initial setup where jumpers, switches and potentiometers are configured in a generic fashion in order to get basic results that verify that everything is working as it should.

The QDC-400

Switch Configuration

When using more than one QDC-400 the Id number must be configured on each board with the S1 DIP switch.

The CNA Local I/O Network (LIN) can support up to 32 devices. Each of these devices requires a unique ID number. IDs 13 through 16 are reserved for the QDC-400 control board. The ID must be set correctly to operate properly. The ID number determines which channel configuration or control record data the QDC-400 will use. ID 13 is dimmer card 1 and only cares about the “control record” for channels 1, 2, 3, 4. ID 14 is dimmer card 2 and only cares about the “control record” for channels 5, 6, 7, 8. ID 15 is dimmer card 3 and only cares about the “control record” for channels 9, 10, 11, 12. ID 16 is dimmer card 4 and only cares about the “control record” for channels 13, 14, 15, 16. *ID switches are ignored in ‘Stand Alone’ mode.*

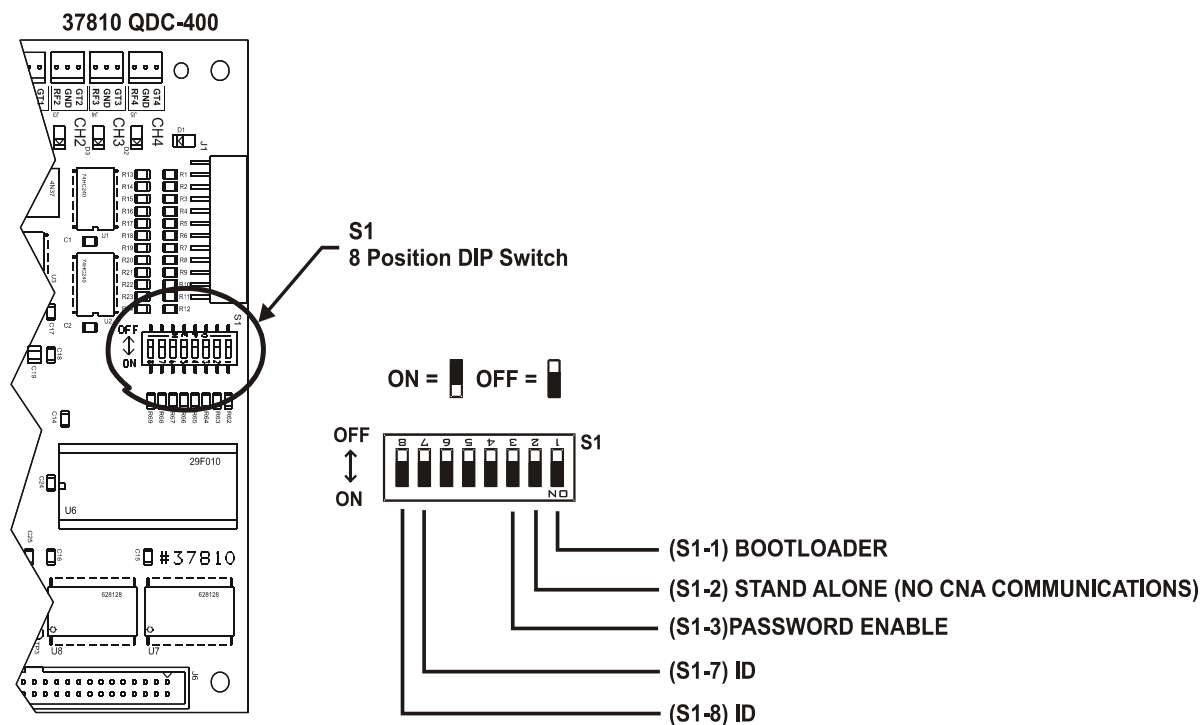




Figure 12

Switch Definitions

S1-1	ON	Force Bootloader
	OFF	Normal Use. (Factory Default)
S1-2	ON	Stand Alone Mode. No CNA communications via the LIN port
	OFF	CNA Mode. Communicates with the CNA via the LIN port.
S1-3	ON	Password Disabled.
	OFF	Password Enabled (Factory Default)
S1-8, S1-7	OFF, OFF	ID = 13 (CNA Mode Only)
	ON, OFF	ID = 14 (CNA Mode Only)
	OFF, ON	ID = 15 (CNA Mode Only)
	ON, ON	ID = 16 (CNA Mode Only)

Bypass Jumpers and Channel Override Switches

These jumpers are used only in conjunction with the (optional) channel override switches. Channel override switches are used to circumvent the electronic circuitry in the event of a QDC-400 control board failure. If channel override switches are not used the jumpers must be in the “AUTO” position. If the override switches are wired to the TS1 terminals, the jumpers must be in the “OFF” position.

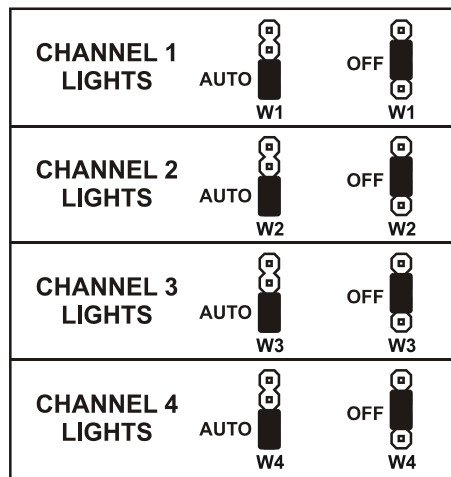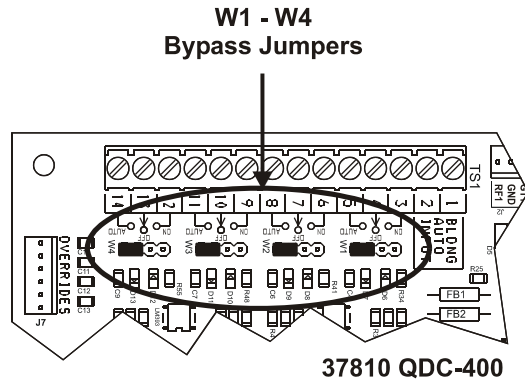

AUTO = Lights are controlled by QDC-400.
 OFF = Lights are OFF. Gate is disconnected.

Figure 13

The QDC-400 provides override inputs individual channel override. Each of channel can be wired to a "double-throw" switch allowing the manual control of the lights in the event of a board failure.

The channel override and cleaning lights switches are supplied by the user and should be mounted in a convenient location. The illustration below shows typical override connections.

Use a single pole 2 position switch. On-Off.
Where On is "lights full up" on all channels
and Off is "lights normal".

Cleaning
Lights

On
Normal

Factory wiring

Use a single pole 3 position switch: On-
Off-Auto. Where On is "lights full up", Off
is "lights full down" and Auto is "lights
automatic".

Channel 1
Override

Channel 2
Override


Channel 3
Override

Channel 4
Override

On
Off
Auto

22 - 18 AWG
3 conductor cable

Move jumpers W1-W4
to center 2 pins for
override switches to
work correctly.

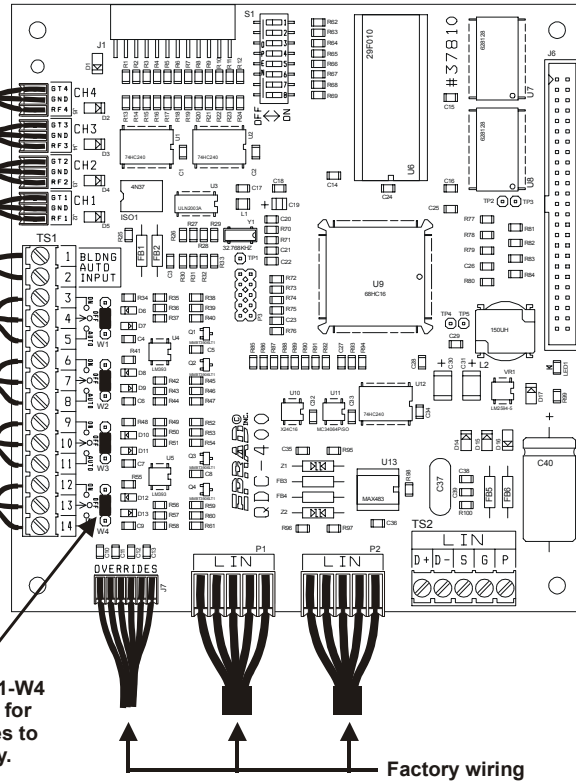

Factory wiring

Figure 14

Status LED

The Status LED located on the QDC-400 control board indicates 1 of 6 condition codes. The Status LED is located on the right side of the control board. Use this status indicator to verify that the QDC is communicating over the LIN when used with a CNA automation.

Condition 1: *Fast Blink* - The QDC-400 computer is working and is communicating properly with the CNA.

Condition 2: *1 Blink On, Pause 2 seconds* - The QDC-400 computer is waiting for data from the CNA, and the outputs are disabled. This condition indicates that since a power up, the QDC-400 has not received data from the CNA. The lights are off and QDC-400 will wait indefinitely for communications to be established.

Condition 3:
2 Blinks On, Pause 2 seconds - Communications Timeout, outputs are disabled. This condition indicates that communications were once established to the CNA and subsequently lost. The lights are off.

Condition 4:
3 Blinks On, Pause 2 seconds - Communications Timeout, outputs are held. This condition indicates that communications were once established to the CNA and subsequently lost. The lights hold their current output level. The local Stage and House overrides will ramp outputs to the new level.

Condition 5:
4 Blinks On, Pause 2 seconds - Running BOOTLOADER program. The Bootloader program should only be running if the 'force bootloader' switch is on or the a 'Flash' program upgrade is in process.

Condition 6:
5 Blinks On, Pause 2 seconds - The QDC-400 is running in 'Stand Alone' mode. DIP switch S1-2 is on.

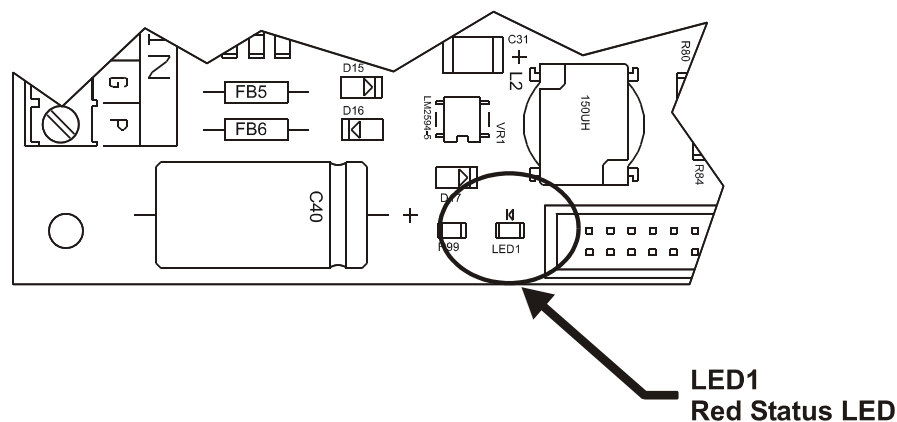


Figure 15

The 37627

37627 Analog Control Card, Basic Setup

The 37627 control card requires an initial, physical setup. DIP switches and Potentiometers are used to set various parameters. The 37627 receives control signals from the CNA system's termination board (39331 or 39332) which trigger predetermined lighting events set up via adjustment potentiometers on either the main circuit board. Optionally there is a front panel remote on the AD series of dimmer cabinets that allow the user to adjust up and down levels for each available channel without opening the cabinet. This feature allows faster re-configuration should future change in brightness transitions be necessary.

The AD series of dimmers have the ability to integrate into virtually any lighting control system that has relay outputs. Front panel switches allow manual control in the event of an automation failure.

Configuration

There are a series of DIP switches that control the "Wake-up" state on the PC board that need to be set as well. These switches determine what state the lights will be in when the unit is first powered up. They are clearly labeled, one switch on each group (SW1 or SW2) can be set to ON and this will determine the wake up state for the corresponding channel.

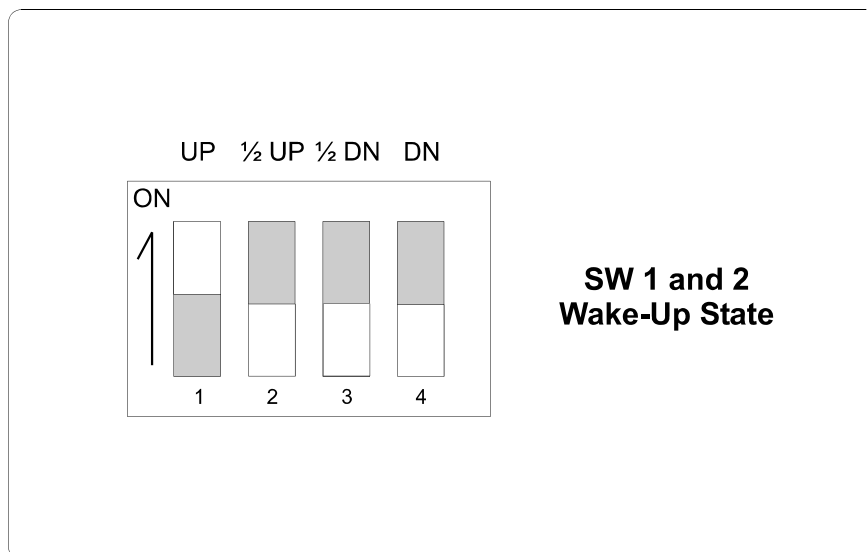


Figure 16

Adjustment Potentiometers

The basic levels of brightness are adjusted via the onboard (or outboard) potentiometers. These are clearly marked and will adjust the light output from 0 to 100%. External control, when selected, is only available for the UP and DOWN levels of each channel.

At **TB-1** the screw down terminal block there are connections for external triggering of events via the CNA termination boards and connections for dimmer power module control wiring.

Basic setup can be accomplished by using the front cabinet bypass switches to override the CNA controls and adjusting the pots until desired lighting levels are reached, internally it may be desirable to set the up and down transition rates as well as the half up and down levels since there are no front user controls for these settings. These functions can also be accessed via the unit's connection to the termination board and can be initiated at the CNA. The appropriate pot is then adjusted to provide the desired lighting transition rates and levels.


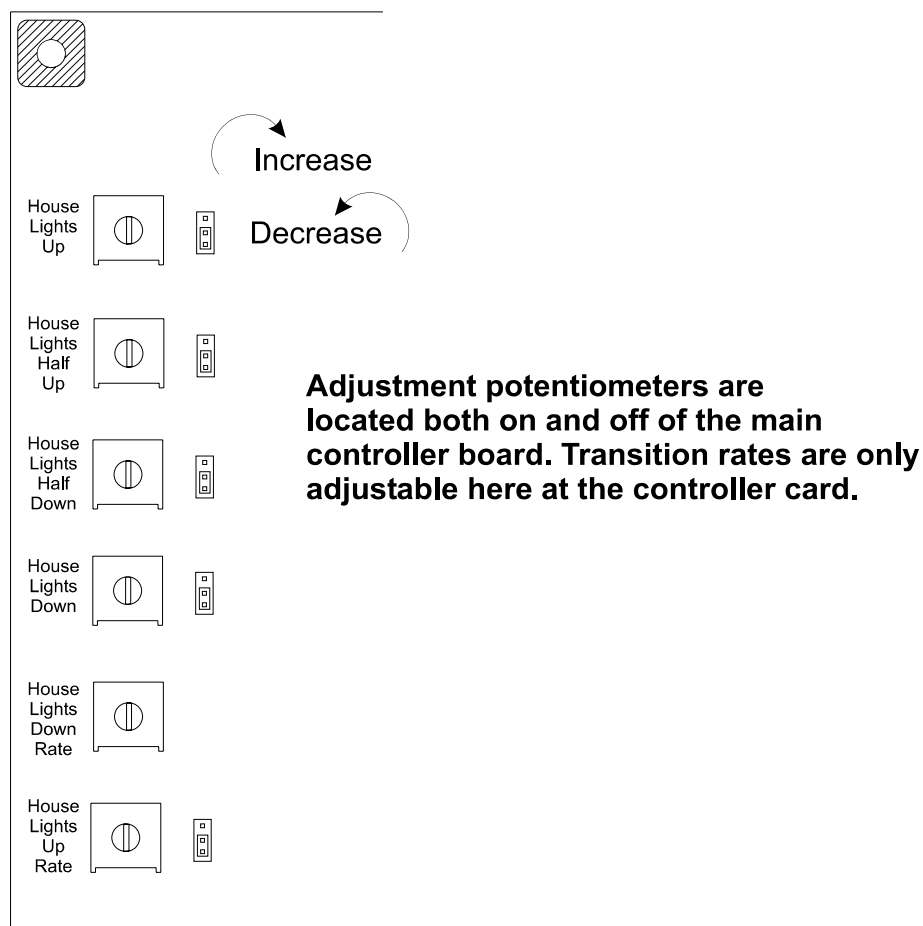


Figure 17


As shown in the accompanying illustrations, there are a series of potentiometers and jumpers on the circuit board. The Jumpers control whether the dimmer adjustments are set on-board or whether the adjustments are set externally via P1. This P1 functionality is utilized when the 37627 board is in a AD controller. Set all jumpers to 2-3 (they will normally be configured this way when they leave the factory). This enables external control.

37627 Analog Dimmer Control Board

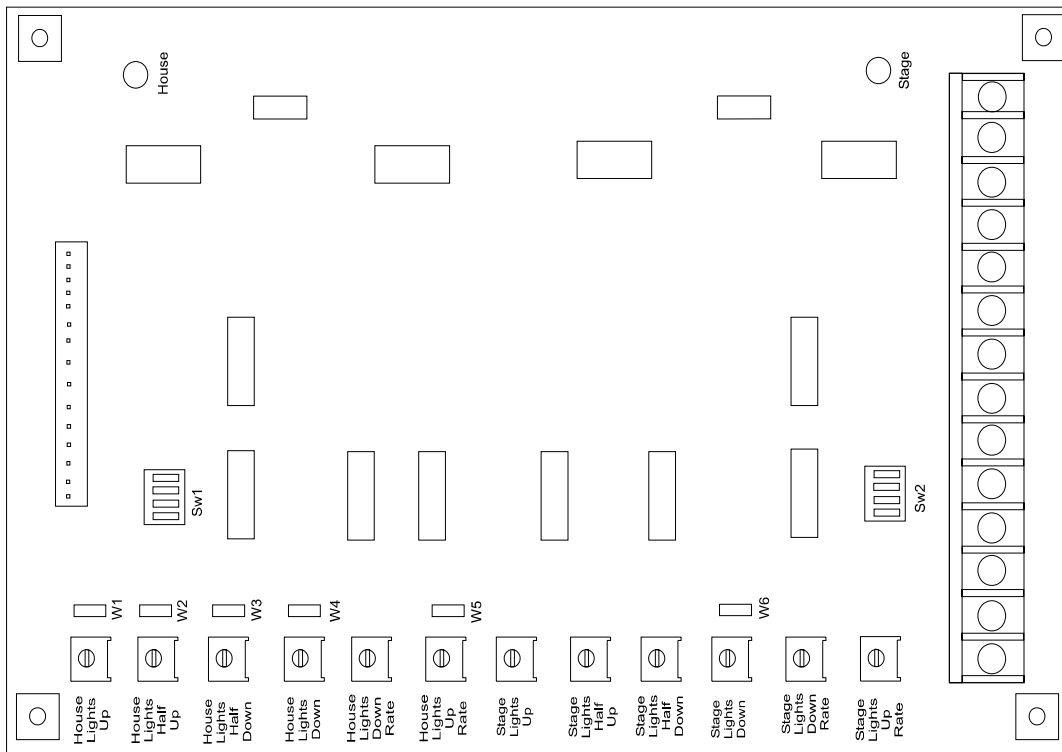

W 1-6
1-2= Onboard Control
2-3= External via P1

Figure 18

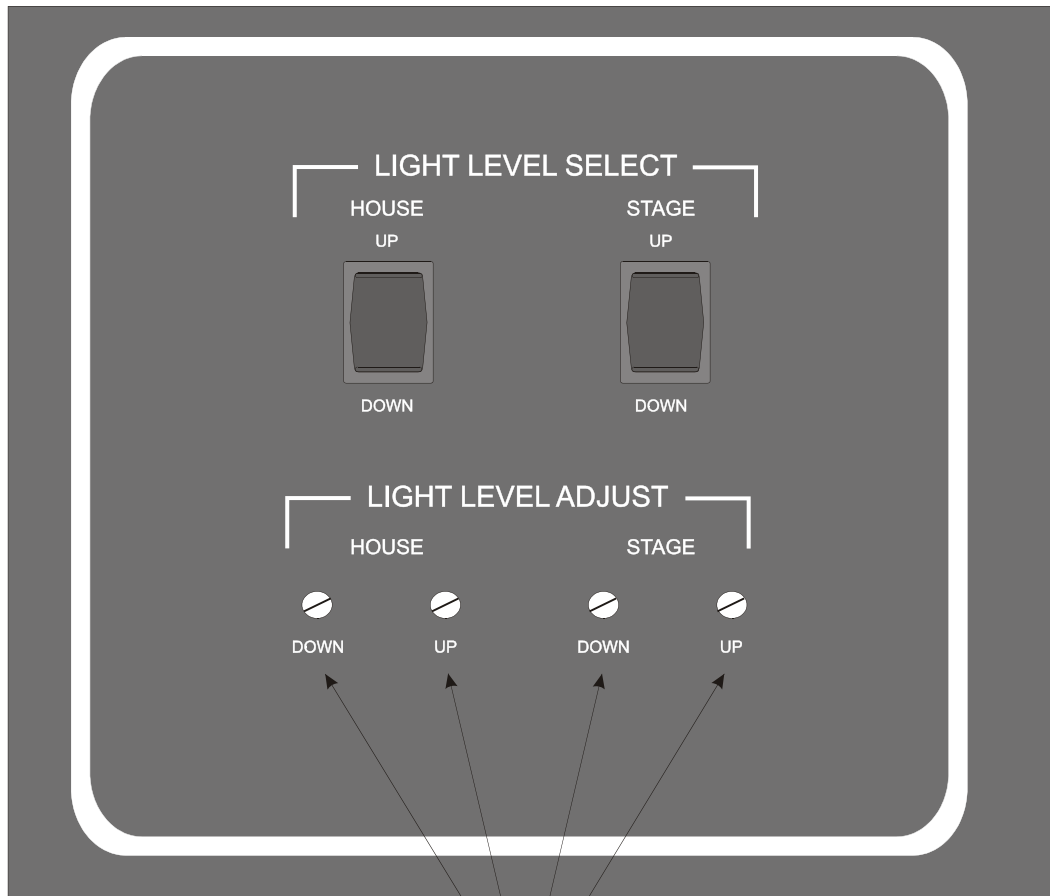

Front Panel Level Adjustments
Figure 19

LCS Dimmer Setup

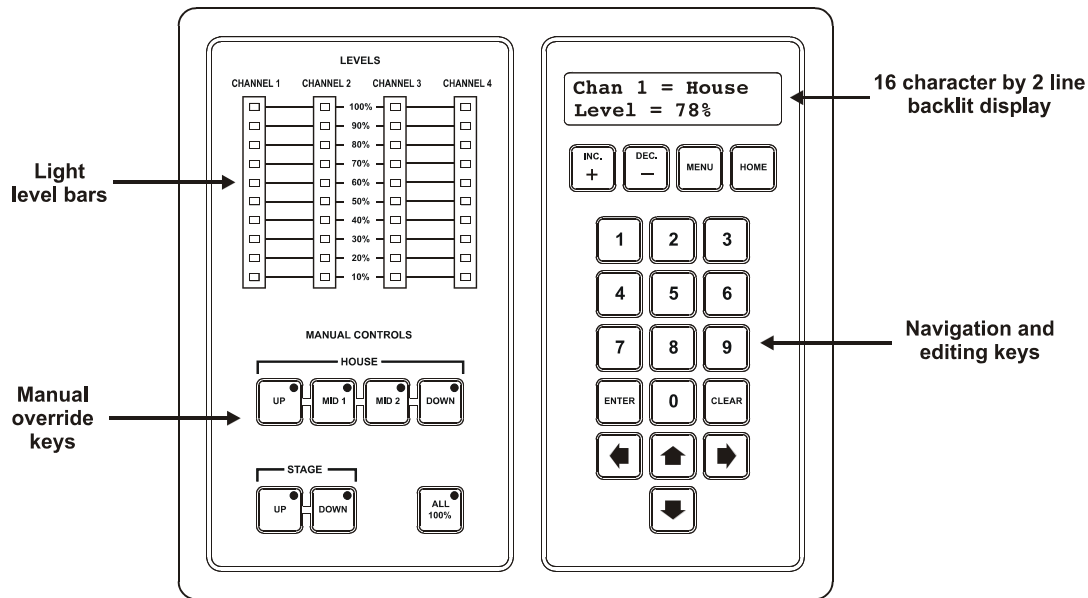


Figure 20

On power up the LCS will display the QDC-400 control board's software version number and checksum.

```

QDC-400 V 8
POWER UP RESET
  
```

```

QDC-400 V 8
CHECKSUM = 65
  
```

The home screen displays the light level for each enabled channel, which corresponds with the 10 segment LED bar graphs. The screen will automatically cycle through all enabled channels. Press the + or - key to manual select the channel you want display. Pressing the Home key will start the automatic cycle again.

```

Chan 1 = House
Level = 0%
  
```

NO POWER is displayed if QDC-400 does not detect a reference signal from the power module. This would indicate either a module is not present, does not have power or is possibly defective.

```

Chan 1 = House
Level = NO POWER
  
```


To set-up the zones and levels for each channel, press [MENU][1]. Enter the password to gain access. Use the [◀],[▶],[▲] or [▼] keys to scroll to the field you want to edit. Select the desired zone for each channel by pressing the [INC./+] or [DEC./-] keys and use the number keys to enter the level and fade time.

Chan	1=House
Up	0% 0 sec

Note: Only the House and Stage zones are supported in Stand-alone mode. In order to use Zones 3 through 16, the dimmer must be in CNA mode and connected to a CNA-200.

The QDC-400 can also display various status messages. To access these screens press [MENU][2]. Press the [▲] and [▼] keys to scroll.

The QDC-400 supports the following five status messages:

QDC-400 V 8	This is the software version of the QDC-400 control board.
Checksum = 65	This is the software checksum
Board #1	Reflects the setting of the DIP switches S1-7 and S1-8 Board #1 = ID 13 Board #2 = ID 14 Board #3 = ID 15 Board #4 = ID 16
LIN Network: OFF	Reflects the setting of the DIP switch S1-2. OFF = Stand Alone Mode ON = CNA Mode
Chan Ref: 1 2 _ _	Displays the channels that are receiving a reference signal from the dimmer power module.

Manual Control

Manual overrides are provided for both the House and Stage zones. The [All 100%] switch ramps all channels to 100% in 2 seconds. Pushing the switch again ramps the lights back to the latest control level in two seconds.

Using the LCS-2K/4K Dimmer with the CNA

The LCS-2K/4K dimmer can be used with all CNA Automation systems. The dimmer's QDC-400 control board should be connected to the LIN. Dimmer data can be edited and saved both at the CNA and at the QDC-400. In order to synchronize the data, the following rules apply on how data is saved:

1. Both the QDC-400 and CNA are on and communicating and data is changed at the CNA. The data is transferred and saved to the QDC-400.
2. Both the QDC-400 and CNA are on and communicating and data is changed at the QDC-400. The data is transferred and saved to the CNA. The message TRANSFERRING DATA TO CNA is displayed for 2 seconds to indicate a successful transfer.
3. The QDC-400 is off and the CNA is on. Data is changed at the CNA. The data is transferred and saved to the QDC-400 when it is powered on.
4. The QDC-400 is on and the CNA is off. Data is changed at the QDC-400. The message TRANSFERRING DATA TO CNA is displayed followed by CAN'T CONNECT TO CNA. This message is displayed until a key is pressed or the CNA is powered on. The data is transferred and saved to the CNA when it is powered on and the message TRANSFER TO CNA SUCCESSFUL is displayed. Press any key to clear the message. Note, however, that if the QDC-400 is powered off and then back on before the CNA is powered on. The CNA will transfer and save its data to the QDC-400 overwriting the QDC-400 data.
5. Both the QDC-400 and CNA are powered up with changed data. The CNA wins. Data is transferred and saved to the QDC-400.

Setup Hint: The QDC-400 along with the DPM-2KW dimmer module can be used to extend bulb life. When set to the proper level, the dimmer can be used to preheat the lamp filaments at a point just below that required for incandescence. This makes it possible to avoid high initial current surges that result when power is first applied to an incandescent lamp because of the low resistance of the cold filament. The high inrush current exposes the bulb filament to stress that can cause premature filament rupture.

eCNA-150 Dimmer Set-up

To access the QDC-400 dimmer setup menu screens:

From the main menu select: **Set-Up** (1), then choose **Supervisory** (1), Then select **Dimmer** (2)
Enter your password if enabled, The Channel and Zone screen is the same as that of the CNA-150

CNA-150 Dimmer Setup

The CNA-150 and QDC-400 Dimmer Control board allow the user to quickly configure lighting scenes.

Enter the dimmer set-up screens by pressing [MENU][1][2] (or by pressing [MENU][ENTER][▼][ENTER]). Enter the password to gain access.

```

Dimmer
ENTER PASSWORD

```

The QDC-400 is a four channel dimmer and each channel must be appropriately set to either “House”, “Stage” or “None”. *Note: Zones 3 through 16 are not supported by the CNA-150.*

With the cursor on the channel field the press [+] or [-] keys to select the appropriate light zone. Repeat this for all channels and exit dimmer set-up to save zone data.

```

Dimmer Ch1=None
Up      0%    0 sec

```

Re-enter dimmer set-up by pressing [MENU][1][2].

But, before programming the levels and fade-in times you need to understand how the CNA-150 controls the House and Stage light zones. There are four *House* light levels that can be programmed from the front panel: UP, MID 1, MID 2 and DOWN. The *Stage* lights operate with the House lights as follows:

When programmed for:	The lights do this:
UP	House Lights UP; Stage Lights UP
MID 1	House Lights MID 1; Stage Lights DOWN
MID 2	House Lights MID 2
DOWN	House Lights DOWN; Stage Lights DOWN

A typical program might look like the following example:

Movie:	Program:	Lights:
Intermission	UP	House UP; Stage UP
Previews	MID 1	House MID 1; Stage DOWN
Feature	DOWN	House DOWN; Stage DOWN
Credits	MID 2	House MID 2
Intermission	UP	House UP; Stage UP

Based on the example above you could program the levels as follows:

House UP	= 80%	10 seconds
House MID 1	= 40%	10 seconds
House MID 2	= 40%	10 seconds
House DOWN	= 10%	10 seconds
Stage UP	= 100%	10 seconds
Stage DOWN	= 0%	10 seconds

Note: You can ignore the Stage MID 1 and MID 2 levels. The CNA-150 does not currently use them.

CNA-100/150 soft overrides and program

<u>Key Press/Cue</u>	<u>Action</u>
UP	House Lights UP; Stage Lights UP
MID 1	House Lights MID 1; Stage Lights DOWN
MID 2	House Lights MID 2
DOWN	House Lights DOWN; Stage Lights DOWN

eCNA-200 Dimmer Set-up


To access the QDC-400 dimmer setup menu screens:

From the main menu select: **Set-up**, choose **Set-up Super**, Then select **Set-up Dimmer**
Enter your password if enabled, The Channel and Zone screen is the same as that of the CNA-200.

CNA-200 Dimmer Set-up

CNA-200 software version 1.028 or higher is required.

Enter the dimmer set-up screens by pressing [Set-up Dimmer] from the Set-up Supervisory menu. Enter the password to gain access.

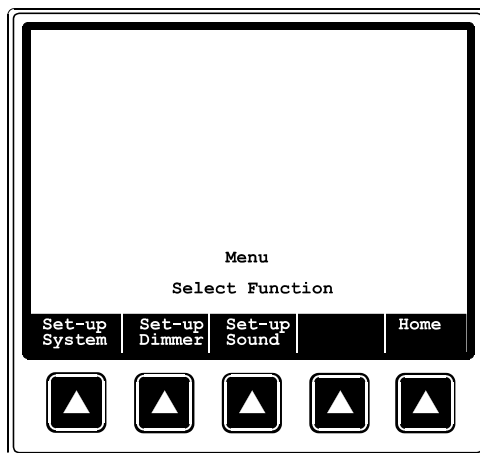

Press Set-up Dimmer.




Enter high level Password.

Each channel must be appropriately set to the desired zone. How these are configured will be determined by the “physical” wiring of the dimmer power modules and lights.


The CNA-200 currently supports up to four QDC-400 Dimmer Control cards. The channels are assigned to the dimmer cards as follows:

Dimmer Card 1	Channel 1, 2, 3, 4
Dimmer Card 2	Channel 5, 6, 7, 8
Dimmer Card 3	Channel 9, 10, 11, 12
Dimmer Card 4	Channel 13, 14, 15, 16

With the cursor on the channel field, enter the number of the channel you want to edit or press the [Prev Page] and [Next Page] keys.

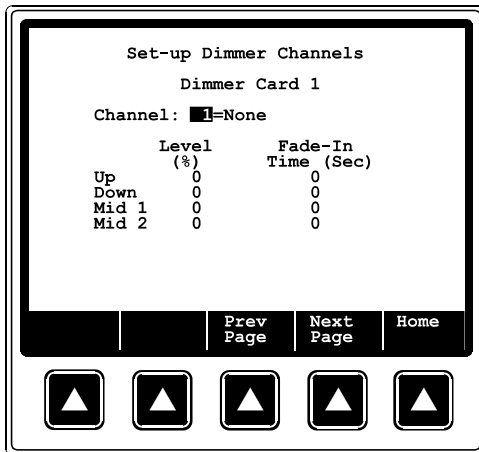

Select channel to edit.

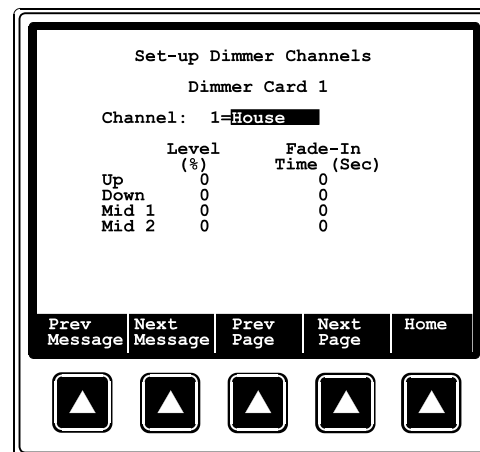

Select zone.

Scroll right to the “zone” field and select either House, Stage or None with the [Prev Message] and [Next Message] keys. This field contains a list of 16 zones and None (disabled). Two of the zones are defined as House and Stage. The selections in the list are as follows:

None	ZONE 5	ZONE 10	ZONE 15
House	ZONE 6	ZONE 11	ZONE 16
Stage	ZONE 7	ZONE 12	
ZONE 3	ZONE 8	ZONE 13	
ZONE 4	ZONE 9	ZONE 14	

Use the cursor keys to move to the Level and Fade-In Time fields. Enter the desired values for each with the number keys. The fade-in time controls how long it takes the lights to ramp to a new level. Legal values for level are 0 to 100%. Legal values for fade-in time are 0 to 99 seconds.

CNA-200 soft overrides and program

Key Press/Cue	Action
HOUSE UP	House Lights UP
HOUSE MID 1	House Lights MID 1
HOUSE MID 2	House Lights MID 2
HOUSE DOWN	House Lights DOWN
Key Press/Cue	Action
STAGE UP	Stage Lights UP
STAGE DOWN	Stage Lights DOWN

Host Dimmer Setup

Dimmer parameters can also be entered from the Host program and copied to the individual CNA automations. This allows the user to configure all the dimmers in the complex from a central location. The dimmers in an entire theatre complex can be setup in minutes regardless of the number of screens. This will save hours of setup time. *Note: Host version 1.007 or higher is required.*

The Dimmer Zone Names screen allows user to enter an 8 character name for Zones 3 through 16. This text will then show up at the CNA setup and program screens.

```

2:09:47 PM  8/ 9/1999  NET  38
Set-Up CNA-200 Dimmer Channels
Record Name:  CNA-200 HOUSE #2
Dimmer Card:  1
0 CURRENT RECORD
3 RECORDS USED
3 TOTAL RECORDS
Level      Fade-In
(%)        Time (sec)
Channel 1= None  Up      100      5
          Down    0         5
          Mid 1   50         5
          Mid 2   50         5
Channel 2= None  Up      100      5
          Down    0         5
          Mid 1   50         5
          Mid 2   50         5
Channel 3= None  Up      100      5
          Down    0         5
          Mid 1   50         5
          Mid 2   50         5
Channel 4= None  Up      100      5
          Down    0         5
          Mid 1   50         5
          Mid 2   50         5
Esc=Menu

```

```

2:14:26 PM  8/ 9/1999  NET  38
Set-Up CNA-200 Dimmer Zone Names
Record Name:  CNA-200 HOUSE #2
3 CURRENT RECORD
3 RECORDS USED
3 TOTAL RECORDS
Zone Name
0 None
1 House
2 Stage
3 Cove
4 Balcony
5 Sconce
6 Tivoli
7 Aisle
8 Stage 2
9 House 2
10 ZONE 10
11 ZONE 11
12 ZONE 12
13 ZONE 13
14 ZONE 14
15 ZONE 15
16 ZONE 16
Esc=Save Changes

```

Host Version 1.007 Zone Names screen.

Host access to QDC-400 parameters is gained by selecting the 100/150 or 200 menu, then selecting Set-up Supervisory. Within these menus you will find the Dimmer Menu screens shown above.

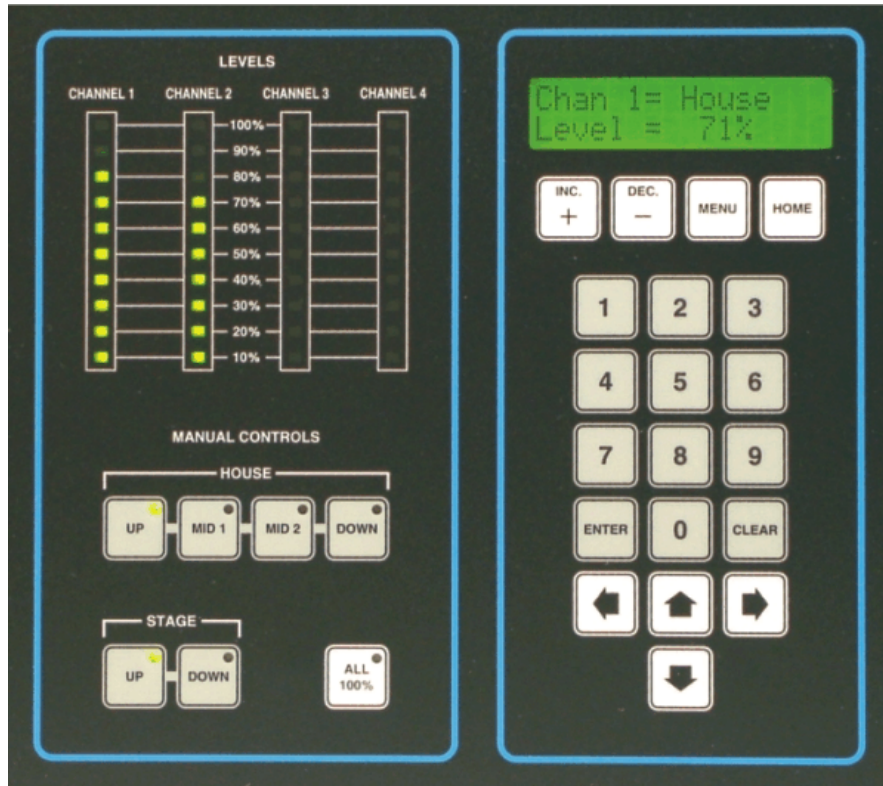


Figure 21

A Photo showing the LCS Dimmer's LCD display, here the output level is set at 71%. In the previous section describing the QDC-400's operation a table is provided to indicate how much voltage is applied to the lighting load for a given percentage of maximum level.

Addendum

Troubleshooting

Care has been taken in the writing of this manual to make special note of potential problems that the installer can avoid. Rather than list all likely faults that can occur during testing, a functioning unit will be defined for the purpose of analyzing and identifying a problem.

1) **Power feed:** Be sure power is connected to your unit. Check with a volt meter to see that voltage is present between the black and white wire terminations at the dimmer power module. Making sure that the breaker(s) are in the “ON” position you should have 120 or 220 Volts depending on your model. If voltage is not present trace the power back to the terminal block, a meter should show voltage between the recessed screws where the power feed enters the circuit. If there is no voltage at the module, but there is voltage at the terminal block, suspect open wiring to the circuit breaker, on occasion a circuit breaker will fail. The breaker can be removed and the continuity can be checked with your meter’s Ohms setting. If there is no voltage at the terminal block, suspect the input lines, either at the terminal block connection, or at your system’s feed circuit.

Note: The LCS dimmer has a secondary power connection that supplies additional current to run the front panel display circuitry. Check for proper line voltage at the terminal block positions for this feed. Observe and test if necessary the fuse located on the side wall of the unit.

The next item to check would be the load, with the power removed and your meter set to measure ohms, check the resistance across the “Hi and Lo” terminals on the dimmer power module. There should be a low resistance indicating that a load is present. If there is a high or infinite resistance, check the load connection at the terminal block, a low resistance should appear, if no resistance is measured, check your connections, there is an open circuit on the load side. If you measure resistance, there is an open between the terminal block and the power module.

In the event that there is proper voltage at the dimmer power modules and the load side circuit is complete, suspect the control circuitry.

2) **Power module:** After determining that your power modules have the proper voltage supply, we will check the module circuitry. The easiest way to accomplish this would be to use the manual override switches, these typically bypass the programmable control circuitry altogether, thus eliminating the possibility of programming/ setup errors. Your unit’s problem then probably lies within the control board itself when the bypass switches do not function. In the case of a 4K unit the channels are wired separate, if one works but the other doesn’t, the channels can be substituted and re-checked to see if the problem lies in the power module, or if it is confined to the controller.

3) **Programming/ Setup:** If your dimmer checks out fine up to this point the problem most likely lies within the automation or actuator that closes a contact. The analog controller responds to switch closure, this can be manually checked with either a substitution or a measurement. Wire a switch to your analog board’s input terminals (37627) then close the contacts. This should tell whether your problem lies in the 37627, or your termination board/ external control.

The measurement method is accomplished by measuring a change from infinite to zero ohms when your external circuit is actuated (Note that the control board should not be connected to your actuator when using this method).

The QDC dimmer can be checked by looking at the status indicator LED on the main board. If it is flashing rapidly, you have LIN communications with your automation. Network communication but no operation except when bypassed is a good indicator that programming or setup errors have been made. If there is no LIN communication, check your wiring etc...

Check to see that the dimmer appears on the LIN if using a CNA automation or Host gateway interface. The LIN status screen should report a QDC, firmware version, and a net ID.

The above process can be adapted to the AP and LDP expansions, the primary difference of course being that there is no control circuitry to check. The control cables should be verified to make sure that they are wired as specified in this manual.

If further help is required in troubleshooting, contact strong international.

QDC-400 Software Changes and Revision History

Software Changes:

Version: 1.00
Checksum: 227
Date: 3/4/98

Software Written to support functions of QDC-400 Dimmer control.

Version: 2.00
Checksum: 230
Date: 3/26/99

Revised code to improve operation. (Changed "BCLR OC1D,#\$08" to "BSET OC1D,#\$08" in OC1IRQ service routine.)

Version: 3.00
Checksum: 47
Date: 4/26/99

Now allows Time of 0 seconds to support "change now" for light levels
 Increased Dimmer maximum time from 60 to 99 seconds.

Added support for Dip Switch setting of LIN ID:

S1-7	S1-8	LIN ID
O	O	13
O	C	14
C	O	15
C	C	16

Added provisions for Dimmer channels to be configured for any 1 byte zone number. Channels configured for other than House or Stage do not support soft (overrides at the dimmer). Loss of Communications causes these channels to turn off.

Version: 5.00
Checksum: 57
Date: 2/4/2000

Now supports LSN FLASH update Network commands The QDC-400's LSN Network address is the same as the CNA-100/150/200's LSN Physical Id it is connected to.

The QDC-400's LSN Logical Id is based on it's S1 DIP Switch setting

S1-2	S1-LIN	Id LSN	Logical Id
Off	Off	13	36
Off	On	14	38
On	Off	15	40
On	On	16	42

Version: 6.00
Date: 6/6/2000

When Running this Bootloader program, the CNA-150/200 and Host programs will show "DevErr" or "Wrong Device Type" on the LIN Network Status Screen. Also when switching between Bootloader and Application programs the CNA-150/200 may experience a LIN Communications Fault (Since the communications are interrupted for a brief period). Asserting the Fault depends on the number of devices connected and the length of time it takes to the QDC-400 to switch programs. These messages and faults are normal and can (may) be expected when running the Bootloader

Version: 8A
Checksum: 77
Date: 4/22/04

Improved noise immunity and made unit operate better with 50 Hz power line frequency
Dimmer screen now displays "transfer to CNA failed" message for 2 seconds rather than waiting for a second key to be depressed

BootLoader Changes:

Version: 001
Checksum: 20
Date: 2/4/2000

Created Bootloader Program for the QDC-400

Version: 002
Checksum: 147
Date: 5/9/2000

Increased rate at which watchdog is toggled
Now Toggles watchdog in FL_Progbk routine

Version: 003
Checksum: 221
Date: 10/7/2002

Re-wrote FL_Erase routine, this allows full erasure of lettered AMD flash chipsets.

Version: 004
Checksum: 208
Date: 10/9/2003

Added support for front panel interface.

Index:

37627	10, 28, 30
37627 Analog Control Card, Basic Setup	24
37627 Operation:	39
37670	10
39331	10, 28
39332	5, 10, 28
Balancing the lighting load across phases	19
Bypass Jumpers	25
Channel override and cleaning lights switches	26
CLD-2K	5
CLD-4K	5
CNA Mode	25
CNA-100/150 soft overrides	36
CNA-150 Dimmer Setup	35
CNA-200 Dimmer Setup	37
CNA-200 soft overrides and program;	40
Description, QDC-400	6
DPM-2KW Dimmer Module	10
Extend bulb life	34
Feed Wiring	13
Force Bootloader	25
Good ground	12
Guidelines, Installation	12
Host Dimmer Setup	39
ID number	24
Installation	12
Installation Guidelines	12
LCS Dimmer Setup	32
LCS-2K	5
LCS-4K	5
LDP-2K	5
LDP-4K	5
LED bar graphs	32
Load and Feed Wiring:	16
Load wiring	13
Local I/O Network (LIN)	24
luminescence	7
Manual Control	34
mounting	18
Multiple QDC-400	24
Normal Operation	9
Operation	6
Operational parameters	39
Override Switches	25
Parallel 2KW Modules	20
Password Disabled	25
Password Enabled	25
Potentiometers	30

Power up defaults	9
QDC Configuration	24
QDC Operation	40
QDC-400 Dimmer Controller	6
AD-2K	5
AD-4K	5
AP-2K	5
AP-4K	5
Software Changes	43
Square Law dimming curve	7
Stand Alone Mode	25
Status LED	27
Status messages	33
Switch Configuration:	24
Switch Definitions	25
Transformer Wiring:	21
Transition rates	29
Typical House and Stage Lights Wiring	19
Typical Wiring Examples	19
Using the LCS-2K/4K Dimmer with the CNA	34
“Wake Up State”	10

Illustrations:

Figure 1	Square Law Chart	Figure 12	QDC DIP switches
Figure 2	37870 Block Diagram	Figure 13	QDC Jumper Locations
Figure 3	Dimmer Power Module Illustration	Figure 14	QDC Override Connections
Figure 4	Small Chassis Dimmer Mounting	Figure 15	QDC Status LED
Figure 5	Large Chassis Dimmer Mounting	Figure 16	37627 Wake-Up DIP Switches
Figure 6	Wiring Configurations	Figure 17	37627 Jumper and Pot Locations
Figure 7	Typical House and Stage Wiring	Figure 18	37627 Illustration
Figure 8	Auxiliary Cabinet Wiring	Figure 19	AD Front Panel Illustration
Figure 9	Parallel Dimmer Modules	Figure 20	LCS Dimmer Illustration
Figure 10	Terminal Block Connections	Figure 21	LCS Dimmer Controls Photo
Figure 11	Multiple QDC Configuration		

STRONG Dimmer Major replacement parts:

Below is a listing of the major components that make up the Various dimmer models, use this table when ordering replacements or inquiring about repairs.

Part Description	Strong P/N	OEM P/N	Model
Dimmer Power Module	5198343	37870	LCS
20A Circuit Breaker		37619	LCS
Display Board		37811	LCS
QDC-400 Control Board	5198346	37810	LCS
Fuse 1A Fast Acting		60612	LCS
2K --> 4K Conversion Kit		37890-K	LCS
Front Panel w/ Keypad		LCS-FP	LCS

Dimmer Power Module	5198343	37870	CLD
20A Circuit Breaker		37619	CLD
2K --> 4K Conversion Kit		37890-K	CLD
QDC-400 Control Board	5198346	37810	CLD

Dimmer Power Module	5198343	37870	LDP
20A Circuit Breaker		37619	LDP
2K --> 4K Conversion Kit		37893-K	LDP


Dimmer Power Module	2198518	37670	AD
20A Circuit Breaker		37619	AD
2K --> 4K Conversion Kit		37891-K	AD
Analog Control Board		37627	AD
External Level adjustment Board		37629	AD
Switch, DPDT Rocker		39337	AD

Dimmer Power Module	2198518	37670	AP
20A Circuit Breaker		37619	AP
2K --> 4K Conversion Kit		37894-K	AP

Other replacement parts available upon request, contact STRONG International with your needs.

Installing the 3789x-K conversion kit:

Rev.1-23-06

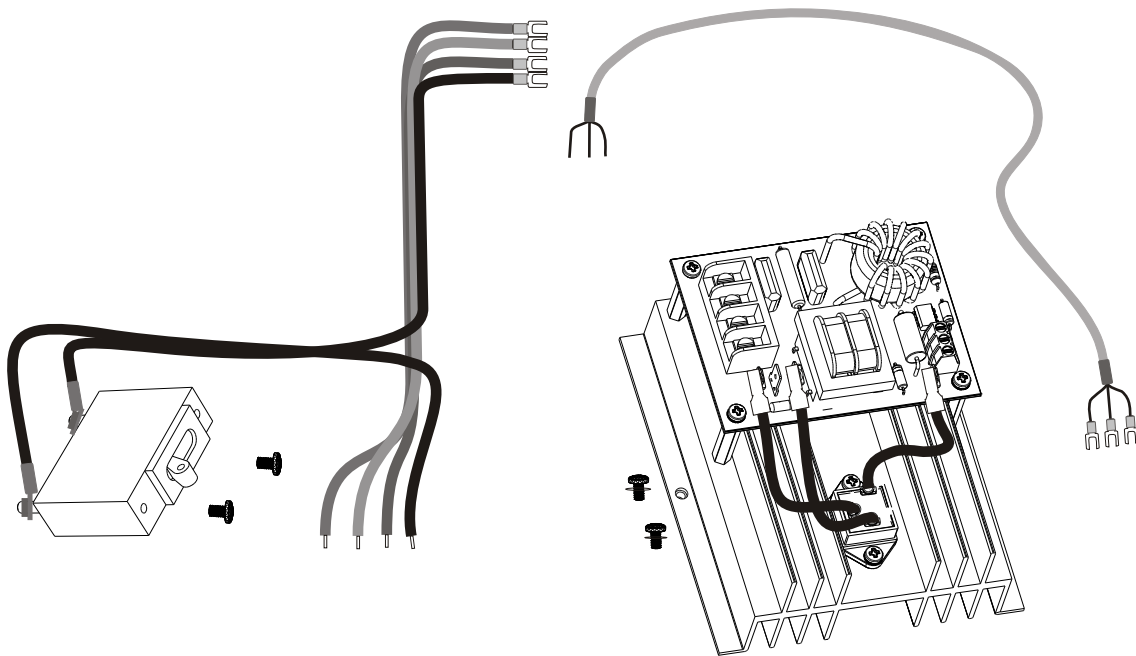

Introduction

All 2K version dimmers ship with only one dimmer power module and are capable of supporting up to 2,000 watts of incandescent lighting load. Some users may find it necessary to convert their single-channel 2K unit over to a dual-channel 4K unit or single channel 4K unit at a future date. This is usually for one of two reasons. Either the current configuration is not capable of handling the amount of lighting present in the auditorium due to an expansion or increase in lighting to be controlled, or the operator would like to have a second independent lighting channel.

Strong offers a convenient kit that will allow the user to install their own power module upgrade. These instructions are provided to guide the installer with this process. If you are not competent in working with electricity, please have a qualified electrician, technician, or other technically oriented person complete this process.

If a suitable installer cannot be found, the dimmer unit can be returned to Strong's facility for upgrade and conversion.

The Kit

Depending on whether you have an analog or a digital dimmer your kit will contain either a 37670 or a 37870 dimmer power module, a high power wiring harness, a control cable assembly, a manual control switch and wiring (for the AD only), hardware, and a circuit breaker.

You will need this document, a phillips screw driver, a medium sized flat-blade screw driver, a 5/16 hex-head nut driver, and a small flat-blade screw driver. The procedure should take about 15 minutes but allow plenty of time in case of difficulty. You may wish to have a multi-meter or continuity tester on hand to test your wiring connections, however it is not required.



a division of Ballantyne of Omaha, Inc.

Caution

As stated earlier, if you are not competent working with electricity and hand tools, get someone who is to do the job. Power entering your dimmer's cabinet must be completely disconnected before removal of the front panel. Merely switching off the front panel breakers will not disconnect anything but the dimmer power module from the incoming mains source.


The main breaker(s) that feed both the dimmer and the load must be locked out/ tagged so there is no chance of a mishap that could result in personal injury or property damage. The upgrade procedure is simple, safe and fast if all proper precautions are followed.

The Procedure

Power must be completely removed and the work area prepared with tools and instructions handy loosen the 4 screws that hold the front panel to the main chassis. Your dimmer is probably wall mounted, so you will find the screws to the left and right sides. They are phillips/ hex head types, a nut driver can also be used, but you will need the screw driver later anyway. Once the screws are loosened, gently pull the cover out and detach the slide on connector at the chassis bottom. This is the safety ground wire that grounds the front panel, it MUST be installed during re-assembly.

Set the front panel aside where it will be out of your way. Next, look at the breaker mounting bracket located to the middle left of the cabinet, at the side of the unit you will see 2 screws. Remove them with your phillips screw driver and pull the bracket up and over toward the center of the unit. Don't lose the screws.

Make a note of where the current circuit breaker is and how it is oriented in the bracket. Pry out the block off plate where the second circuit breaker is to be installed. You may find it easier to remove the existing breaker in order to get better access to the bracket. Once the plate is removed and the existing breaker re-installed (if removed), insert the new breaker assembly with attached wiring harness through the hole and insert and tighten mounting screws.

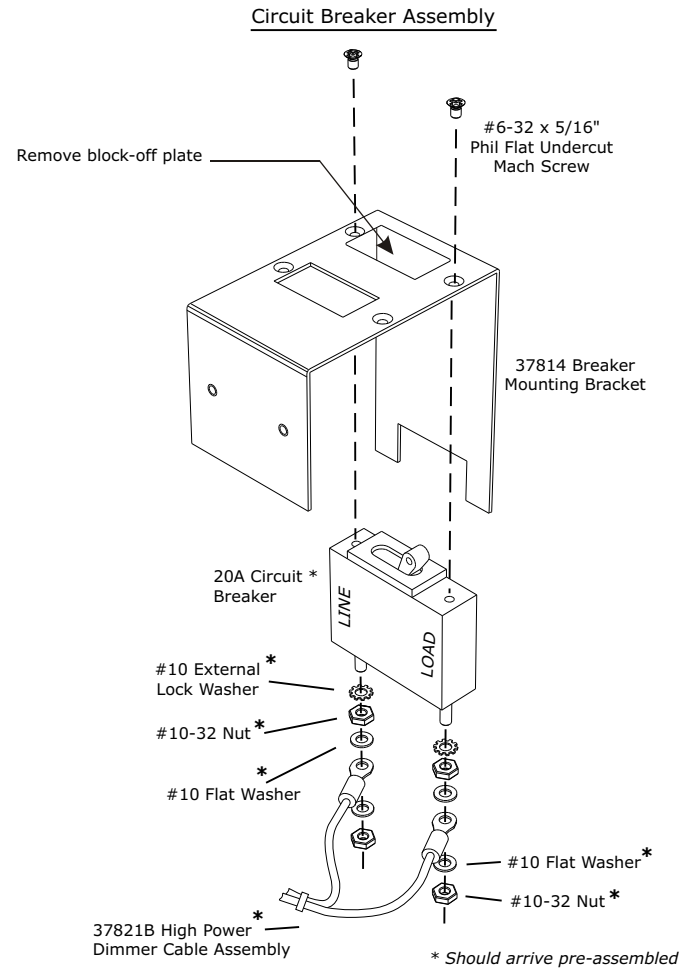


Replace the breaker bracket and secure it with the two screws initially removed from the side of the cabinet. Route the 4 black circuit breaker wires through the notched area at the bottom of the bracket.

The wiring harness will have three high power dimmer wires bundled with the black breaker wires.




High power wiring harness connections
37821B

Power module control wiring termination

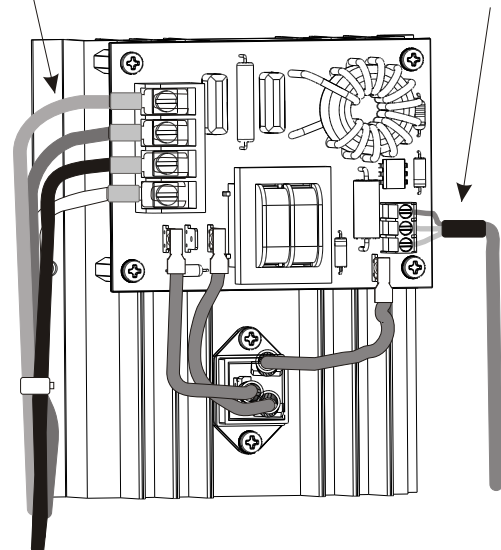


Using the two 8-32 x 1/4" screws supplied, mount the new dimmer power module as illustrated. It should be oriented opposite the existing dimmer power module and rotated 180 degrees. Insert the fork connectors from the wiring harness into the terminal block on the dimmer power module and tighten the screws to secure the connection. The wiring order at the module is Red, Blue, White, Black from back to front. Route the wiring harness down through the center of the cabinet and insert the bare wires into the white terminal block on the main chassis. These are ordered Red, Blue, White, Black from left to right.

They attach to the control board as illustrated, or in the case of the LDP or AP series expansion, they attach to the terminal block to the right of the cabinet. For connection to the AD dimmer fork type terminals are connected as shown.

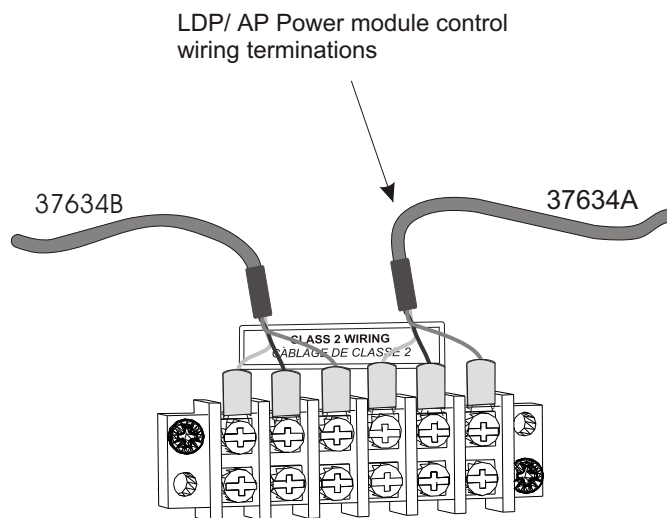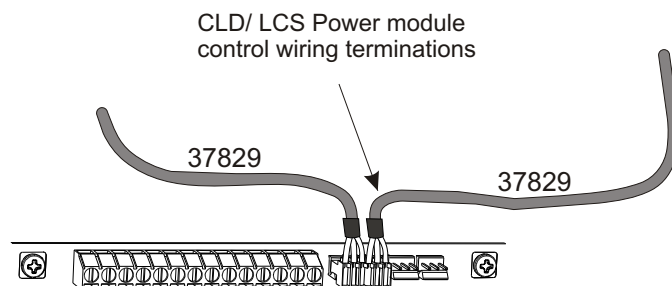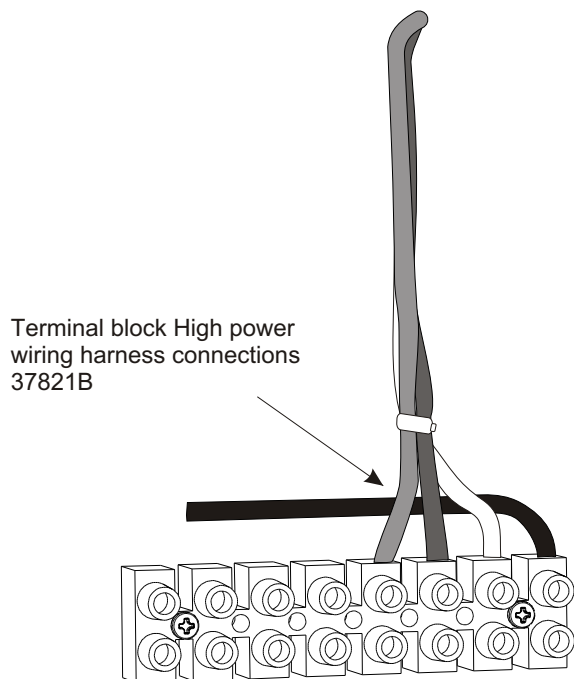


Tighten the screws at the terminal block after ensuring that no wires are protruding or exposed. Gently pull each wire to verify that it is making a safe and reliable physical contact. Inspect to be certain that the terminal block is clamping the wire and not the wire's insulation. Contact with only the wire's insulation will not provide a suitable electrical connection. Remove and re-insert the end if the insulation is clamped instead of the wire.

Next connect the gray multi-conductor dimmer control wire to the small terminal block at the outside edge of the dimmer power module. From back to front the order is Green (or white), Black, Red as shown in the illustration. This wire is routed through the opening between the dimmer area and the control section in the cabinet. The cable will be terminated in either a multi-pin connector or individual fork type connectors.

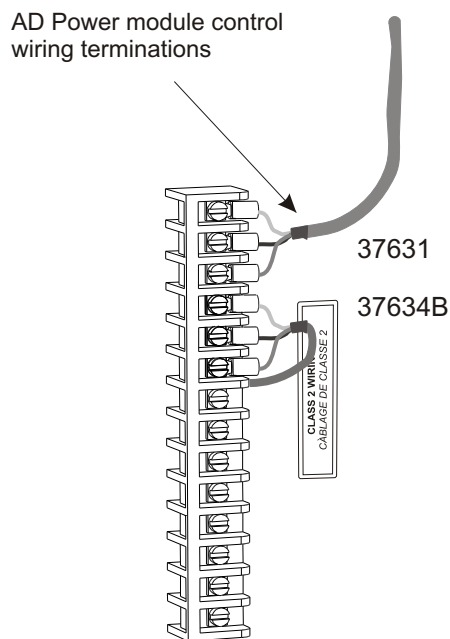

Next remove and set aside the 2 screws that retain the front hinged control panel. The panel is rotated downward so the manual control switch is exposed on the AD series, or the control panel circuitry is exposed on the LDP series dimmer. This procedure will provide better access to the location of the gray dimmer control cable connections.

Install the manual control switch through the control panel on the AD series dimmer after removing the block off insert. The switch's connections should be to the left side of the switch when looking from the front of the unit. If the switch orientation is reversed during this procedure, the up and down functions will work opposite of what they should.

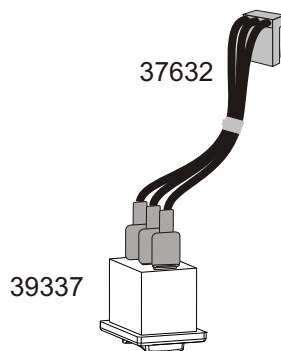

The switch will have a cable assembly attached, the red connector needs to be placed on the small control board in a position labeled P3. The connector is polarized to eliminate errors in wiring. With the LDP series dimmer the manual controls are already present therefore no further conversion wiring is needed.

Wire Load and line power connections to your new lighting circuit as outlined in the Strong dimmer setup and installation manual.

This completes the installation, for re-assembly reverse the disassembly process: rotate control plate, secure with two flat head undercut screws, inspect wiring, connect front cover safety ground, replace front cover, tighten 4 screws.

Testing

Apply power to the cabinet and test unit. Follow the set up procedure as outlined in the Dimmer setup and operation manual. If unit does not operate as expected, verify all connections, setup, and operational parameters. If you require technical assistance, call Strong international or consult a qualified technician.

Deviation

The above configuration should suit most installations. For other wiring configurations such as parallel modules, or auxiliary cabinet wiring please refer to your dimmer manual or consult Strong International for a solution. This document is only intended to serve as a guide for the installation of the 4K conversion package.

Parts Listing By Kit:

37890-K

37821B assembly including Circuit Breaker, screws and harness
37829 Dimmer Control Cable
37870 Dimmer Power Module and mounting hardware*

37891-K

37821B assembly including Circuit Breaker, screws and harness
37634B Dimmer Control Cable
37670 Dimmer Power Module and mounting hardware*
37632 Manual control Switch Cable assembly with 39337 Switch

37892-K

37821B assembly including Circuit Breaker, screws and harness
37829 Dimmer Control Cable
37870 Dimmer Power Module and mounting hardware*

37893-K


37821B assembly including Circuit Breaker, screws and harness
37634A Dimmer Control Cable
37870 Dimmer Power Module and mounting hardware*

37894-K


37821B assembly including Circuit Breaker, screws and harness
37634A Dimmer Control Cable
37670 Dimmer Power Module and mounting hardware*

* Dimmer Power Module mounting hardware consists of two 8-32 x 1/4 phillips-head screws with internal star washers.


CLD System Wiring Diagram

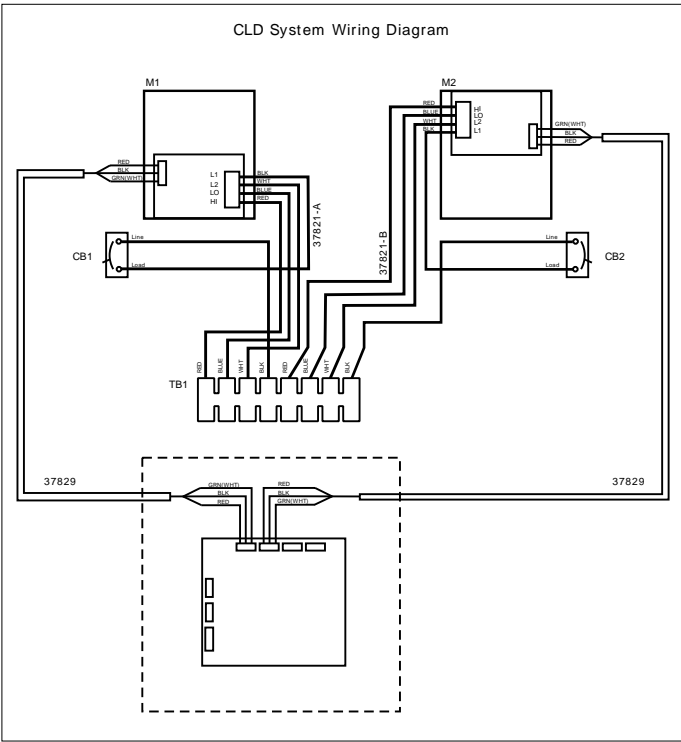

LCS System Wiring Diagram

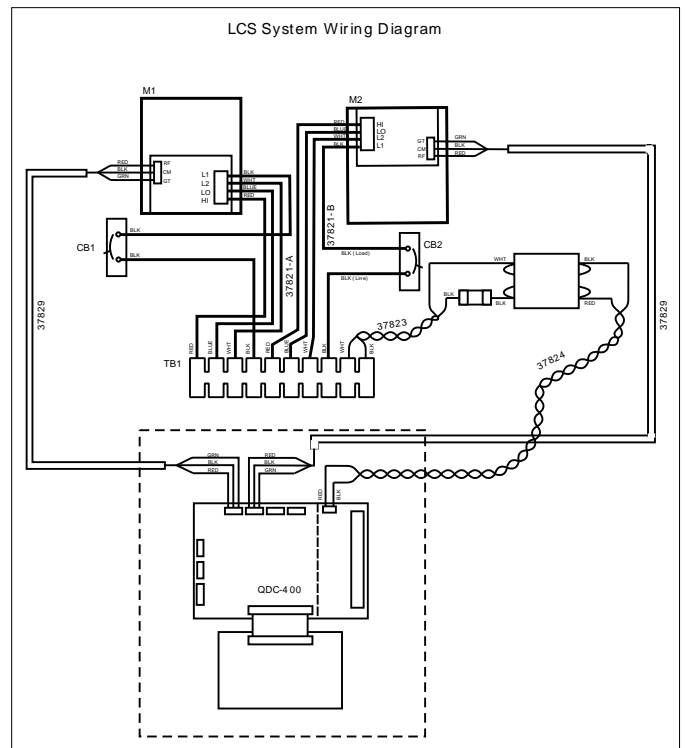

LDP/ AP System Wiring Diagram

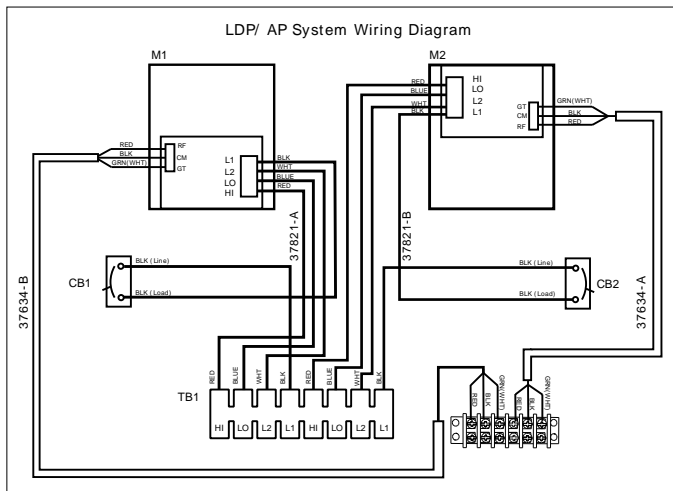

AD System Wiring Diagram

